

**ADJUSTABLE HINGE INSTRUCTIONS**

Should you find it necessary to make some minor adjustments to your Clad Ultimate Inswing French Door after it has been permanently installed, the optional adjustable hinges will allow you to do this

1. Make horizontal adjustment first.

To adjust panel(s) horizontally away from jamb, turn horizontal adjustment screw counter-clockwise using 5/32" Allen wrench provided. To move panel toward jamb, turn Allen screw clockwise. See illustration 1.

Make any vertical adjustments only after horizontal adjustments are complete.

To adjust panel(s) vertically in an upward motion, turn vertical adjustment screw clockwise using 5/32" Allen wrench provided. To lower panel, turn Allen screw counter-clockwise. See illustration 2.

**NOTE:** When raising or lowering panel vertically, it will be necessary to loosen or tighten all vertical adjustment screws so the weight of the panel will not be on just one hinge. Compare alignment marks on each hinge to ensure even weight distribution of the panel.

