

This instruction can be used for Ultimate Sliding Doors and Ultimate Inswing French Doors (ordered on 2/28/2010 and later).

*NOTE: Ultimate Sliding French Door shown for illustrative purposes*

### You Will Need to Supply

Tape measure	Drill
3/32" drill bit	Phillips head bit
Stiff putty knife	#1 Phillips screwdriver

### Standard Parts Shipped

Screen  
 Hardware package which includes:  
 2-Roller Track Plugs      Strike for Screen  
 3-Screws to mount Roller Track      2-Screws for Strike  
 A1070 Standard Screen Track applied to door (Clad door only)  
 W5221 Wood Filler (Wood door only)  
 Foam Bumper

### Installing the Screen Panel

1. From the exterior, hold the screen with the rollers facing you while tilting the bottom of the screen panel away from the door. Lift the rollers into the screen track and pull the panel toward your body to engage the rollers in the track. See figure 1. Make sure the rollers are seated in the screen track by moving the panel back and forth.

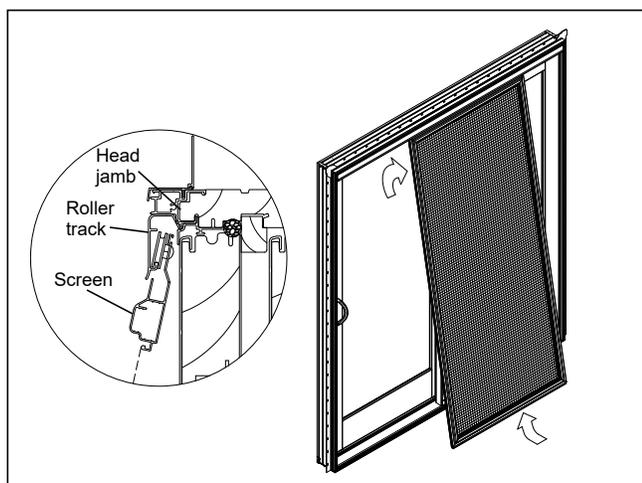


Figure 1

2. Once you are sure the rollers are fully seated in the screen track, pivot the screen panel onto position toward the sill and place the bottom screen panel

guide into the sill track by lifting it with your fingers or by lifting with a stiff putty knife. See figure 2.

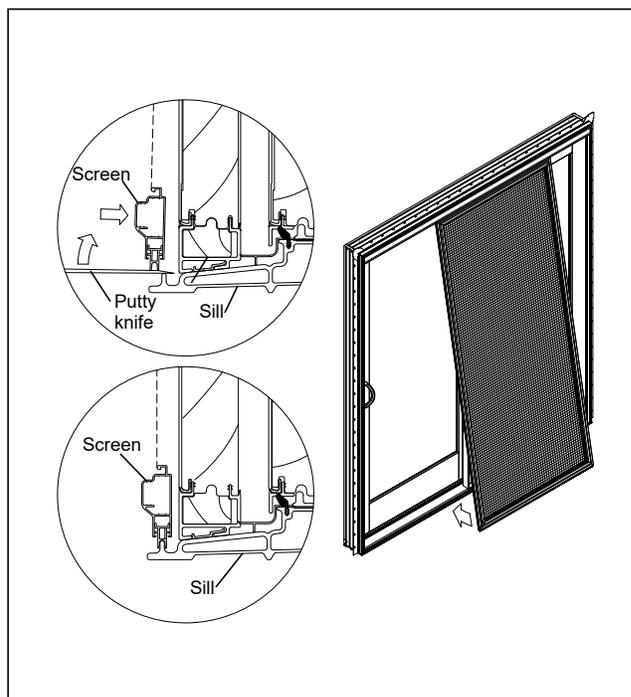


Figure 2

### Screen Adjustment

1. Adjustment is possible from the interior by loosening or tightening the top roller screw nearest the locking jamb. Adjust the screen so that it is parallel to the locking jamb or casing to achieve an even reveal along the entire height of the jamb. See figure 3.

*NOTE: If more adjustment is necessary, the other roller adjustment screw can be used but the screen panel may need to be removed for access.*

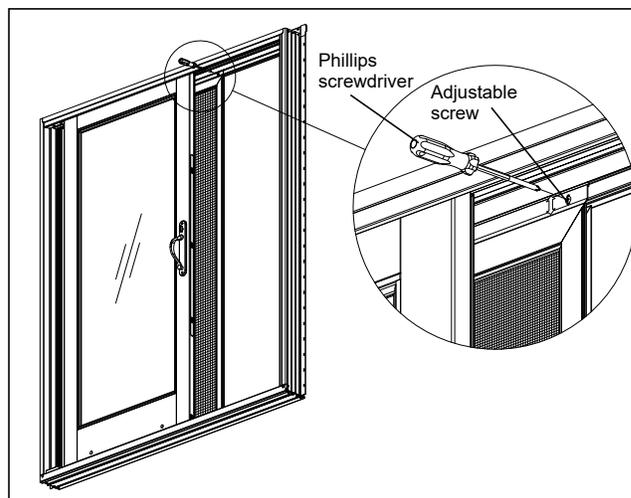


Figure 3

## Screen Lock Installation

1. To install the screen lock on side (or center) jamb, raise (unlock) the screen latch. Open the screen and lightly mark the location of bottom of latch with a pencil on the exterior face of the screen. Close the screen against the jamb. Transfer latch location from the screen frame to the jamb. See figure 4.

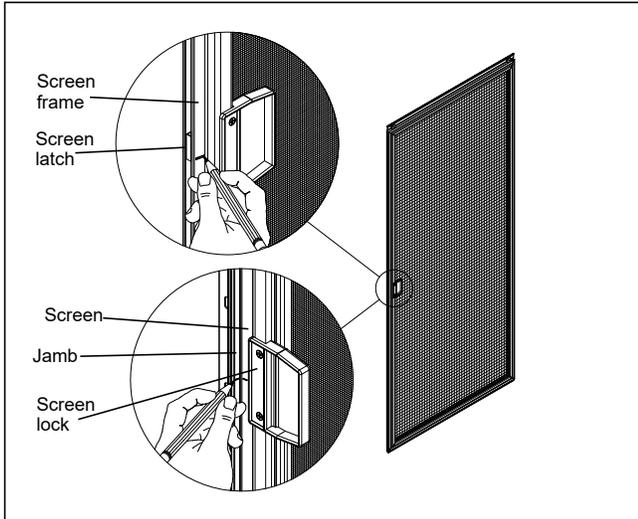


Figure 4

2. Open and slide the screen out of the way. Position strike on the jamb  $1/8"$  (3) below the latch reference mark. Center the strike on jamb and fasten with the 2 #6 x  $1/2"$  pan head screws provided. Set strike screws at the center of the adjustment slots. Close screen and check latch operation. Raise or lower the strike as needed.

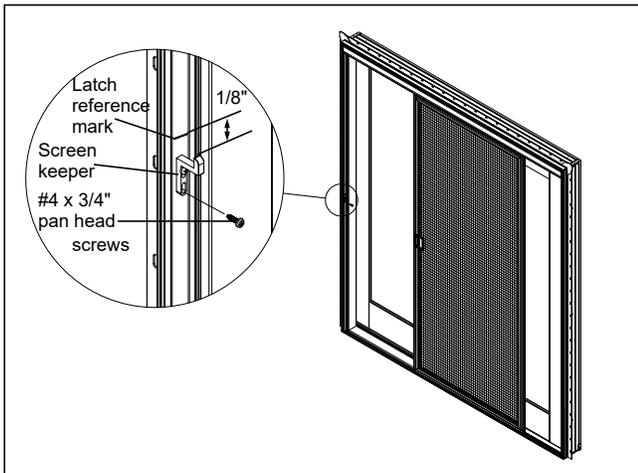


Figure 5

## Removing the Screen Panel

1. To remove the screen panel, start at the bottom corner and pry the screen panel guide up with a putty knife. Pull the guide off the screen sill track and work your way to the other end. See figure 6.

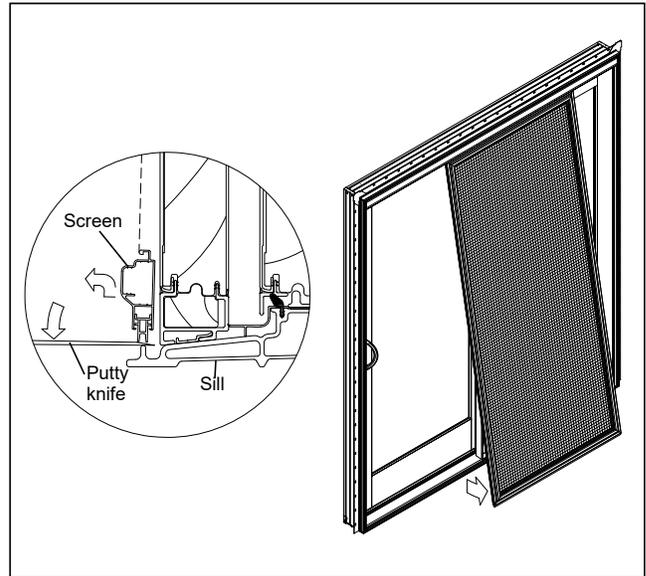


Figure 6

2. Once the sill end of the screen panel is completely released from the sill track, pivot the bottom of the screen out and push the panel toward the head jamb. This will release the screen panel rollers from the head jamb screen track. Remove the panel from the door. See figure 7.

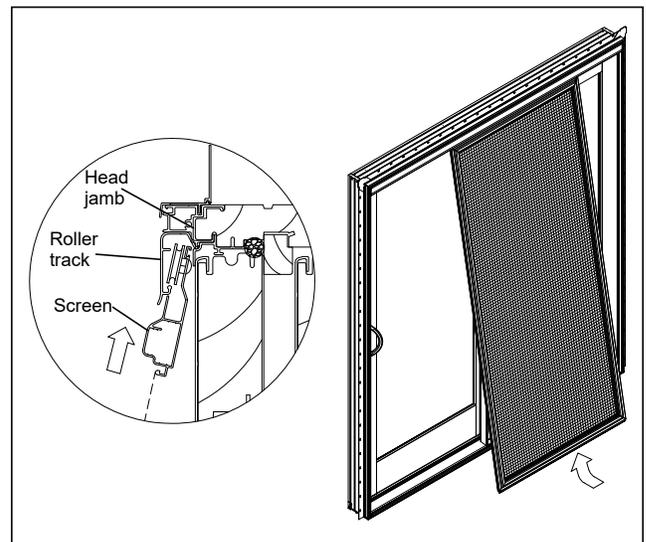


Figure 7