

Ultimate French Door Wood Sill Overlay

Supplemental Instructions

ABSTRACT: Mahogany sill covers are available for Clad Inswing and Wood Inswing French Doors with X and XX configurations.

Install the Sill Cover

1. Remove the tape backing from the adhesive applied to the back of the cover. There will be one strip on a 4 9/16" cover and two strips on a 6 9/16" cover. See [Figure 1](#).



Figure 1

2. Align the notch on the cover to the screen track on the sill. [Figure 2](#).



Figure 2

3. Press into place. See [Figure 3](#).



Figure 3

4. Finish following the guidelines found in the [General Paint and Stain](#) instructions (part number 19912916).