

Elevate Patio Door Field Service Guide

Removing Excessive Thumb Turn Play



ATTENTION: This Field Service Guide corrects the side to side / in and out play on thumb turn found in earlier versions of the Elevate Patio Door Handle.

Parts Included with Kit (Part Number 10150065)


ILLUSTRATIONS (not to scale)	DESCRIPTION	PART NUMBER
	1 - Thumb turn spacer (A)	10150062
	1 - Wave washer (B)	10150061
	1 - Push washer (C)	10150063

YOU WILL NEED TO SUPPLY

#2 Phillips screwdriver
Putty knife or standard screwdriver

Installation Procedures

1. Remove the interior escutcheon plate from the panel by removing the two #8 x 2 1/2" Phillips panhead screws. Using a standard screwdriver or putty knife, pry the two (2) push washers that hold the tailpiece of the thumb turn to the escutcheon plate. You will need to carefully work around the washers to remove them. See figure 1.

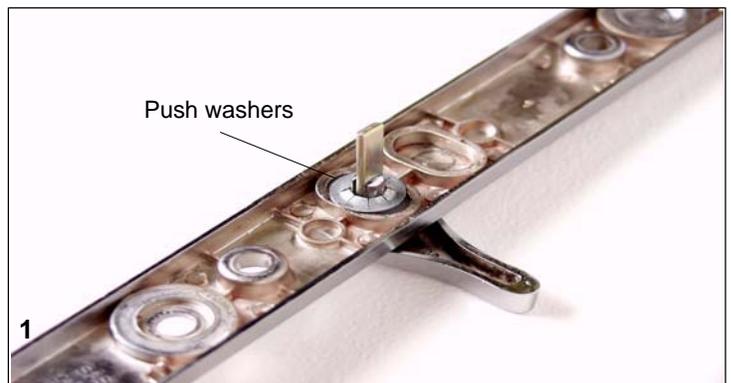

2. Remove the thumb turn from the escutcheon. Push the nylon thumb turn spacer into the oval turn lever hole on the handle side of the escutcheon. Slide the wave washer over the tailpiece. See figure 2.

3. Insert the thumb turn and tailpiece assembly through the thumb turn spacer and replace the push washer removed earlier with the new one provided. Replace the escutcheons and fasten with the panhead screws removed earlier.

CAUTION: Do not over-seat push washer as this may not allow proper thumb turn operation.

