

# Vivid Bi-Fold Door Configurations

## Contents

 
|                                                             |    |
|-------------------------------------------------------------|----|
| Configurations .....                                        | 2  |
| Uni-directional - Left- 1L .....                            | 3  |
| Uni-directional - Right- 1R .....                           | 4  |
| Uni-directional - Left- 2L .....                            | 5  |
| Uni-directional - Right- 2R .....                           | 6  |
| Uni-directional - Left - 3L .....                           | 7  |
| Uni-directional - Right - 3R .....                          | 8  |
| Uni-directional - Left - 4L .....                           | 9  |
| Uni-directional - Right - 4R .....                          | 10 |
| Uni-directional - Left - 5L .....                           | 11 |
| Uni-directional - Right - 5R .....                          | 12 |
| Uni-directional - Left - 6L .....                           | 13 |
| Uni-directional - Right - 6R .....                          | 14 |
| Uni-directional - Left - 7L .....                           | 15 |
| Uni-directional - Right - 7R .....                          | 16 |
| Uni-directional (equal) - Operating Panel - 1L1R (LH) ..... | 17 |
| Uni-directional (equal) - Operating Panel - 1L1R (RH) ..... | 18 |
| Bi-parting (equal) - 2L2R .....                             | 19 |
| Bi-parting (equal) - 3L3R (LH) .....                        | 20 |
| Bi-parting (equal) - 3L3R (RH) .....                        | 21 |
| Uni-directional (unequal) - Operating Panel - 1L2R .....    | 22 |
| Uni-directional (unequal) - Operating Panel - 2L1R .....    | 23 |
| Uni-directional (unequal) - Operating Panel - 3L1R .....    | 24 |
| Uni-directional (unequal) - Operating Panel - 1L3R .....    | 25 |
| Bi-parting (unequal) - Operating Panel - 4L1R .....         | 26 |
| Bi-parting (unequal) - Operating Panel - 1L4R .....         | 27 |
| Bi-parting (unequal) - Operating Panel - 5L1R .....         | 28 |
| Bi-parting (unequal) - Operating Panel - 1L5R .....         | 29 |
| Bi-parting (unequal) - Operating Panel - 6L1R .....         | 30 |
| Bi-parting (unequal) - Operating Panel - 1L6R .....         | 31 |

# Configurations


Stationary Unit




Uni-directional Left  
or Right Units

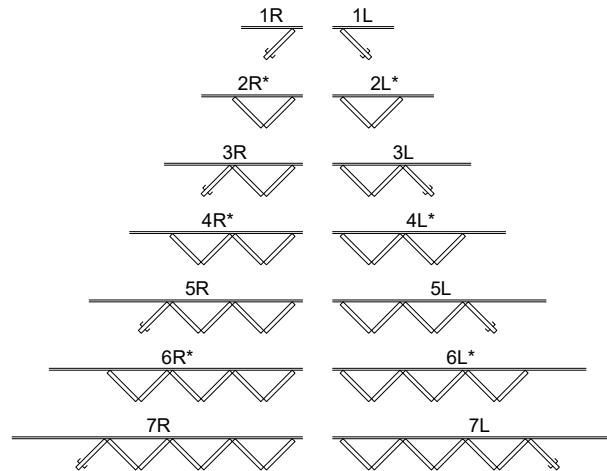

 Uni-directional Left  
or Right Units with  
Operating Panel/s

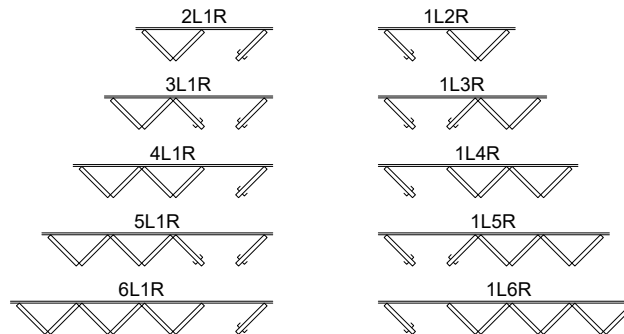

Bi-parting (equal)  
Units


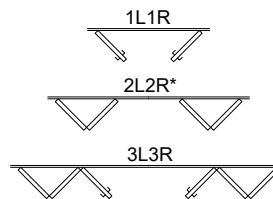 


\*not accessible from exterior


# Uni-directional - Left- 1L

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 1L

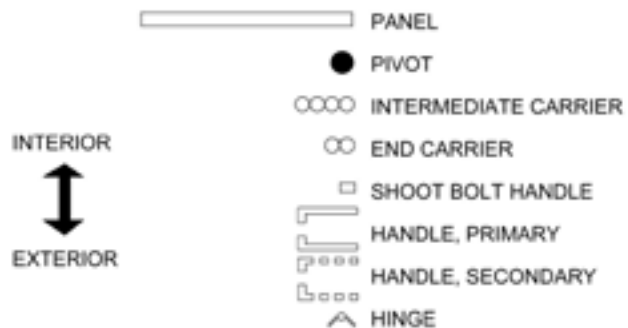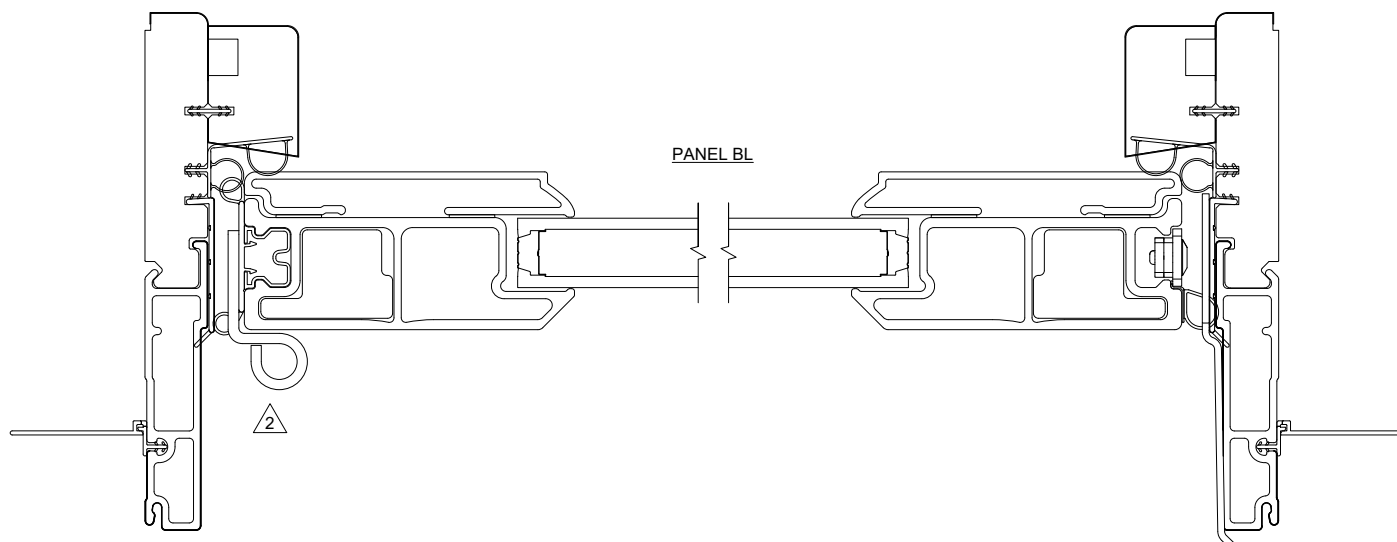

OPERATION DIAGRAM  
NOT TO SCALE

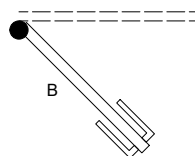 




| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916339

# Uni-directional - Right- 1R

   USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

**1R**

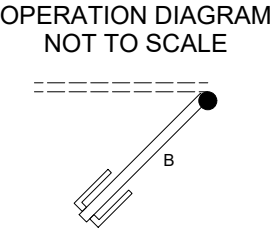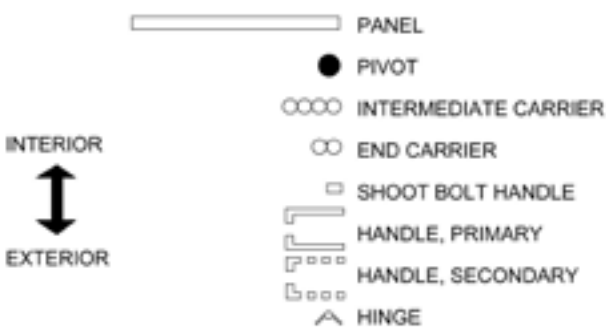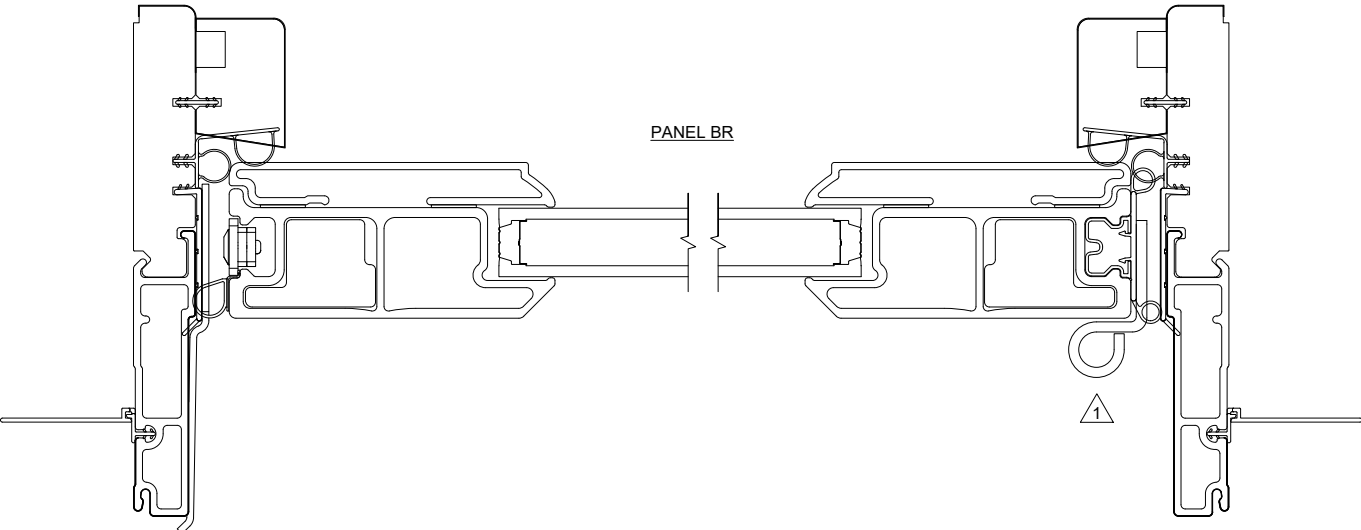



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916346


# Uni-directional - Left- 2L

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 2L

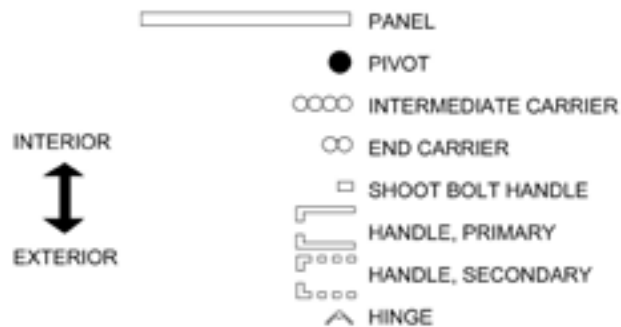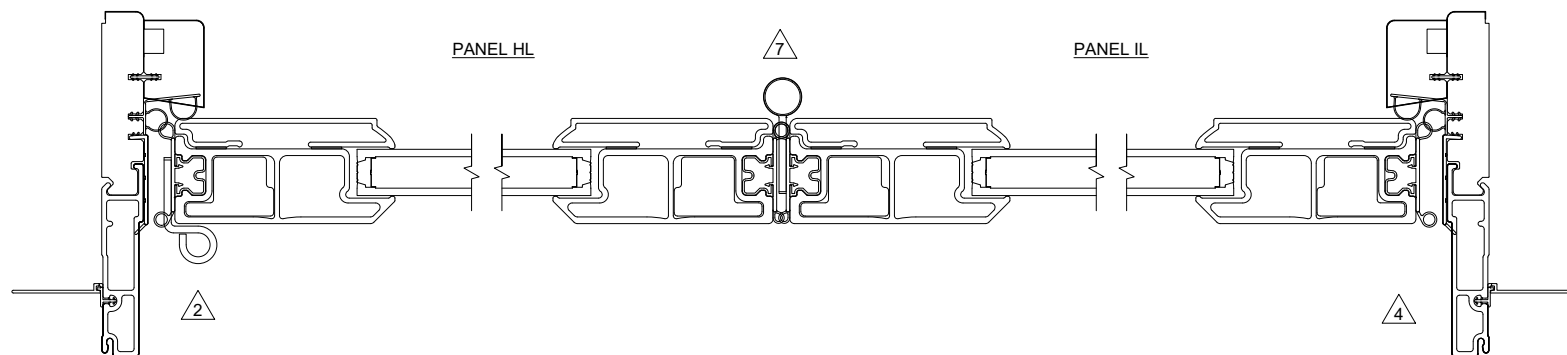

OPERATION DIAGRAM  
NOT TO SCALE

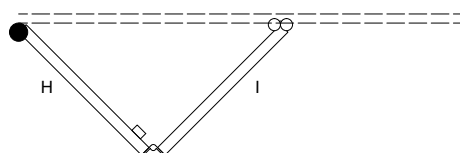 

HINGE MATRIX



| HINGE # | HINGE DESCRIPTION        |
|---------|--------------------------|
| 1       | WALL PIVOT - RIGHT HAND  |
| 2       | WALL PIVOT - LEFT HAND   |
| 3       | INTERMEDIATE CARRIER     |
| 4       | END CARRIER - RIGHT HAND |
| 5       | END CARRIER - LEFT HAND  |
| 6       | OFFSET HINGE             |
| 7       | STRAIGHT HINGE           |

19916340


# Uni-directional - Right- 2R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 2R

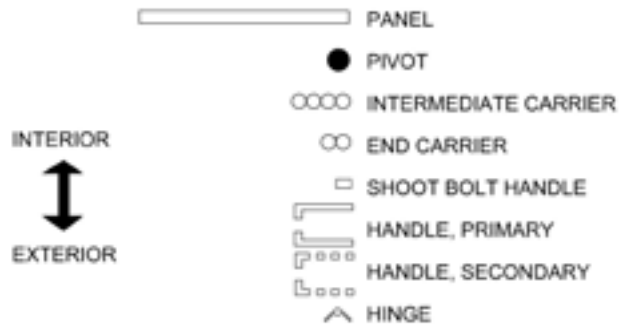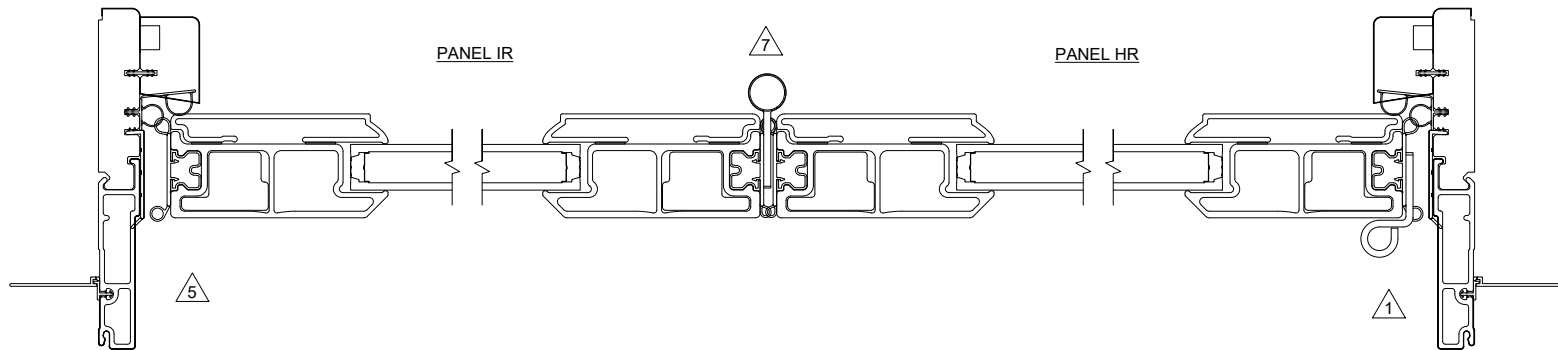

OPERATION DIAGRAM  
NOT TO SCALE

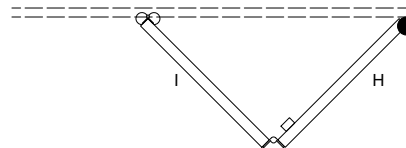 


| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916347

# Uni-directional - Left - 3L

 
USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 3L

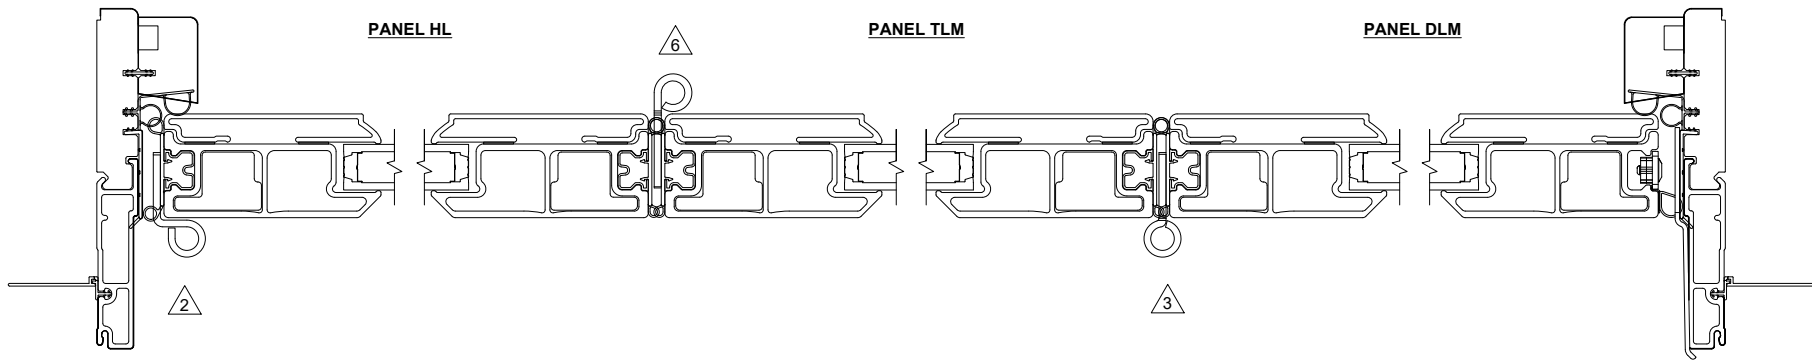

- PANEL
- PIVOT
- INTERMEDIATE CARRIER
- END CARRIER
- SHOOT BOLT HANDLE
- HANDLE, PRIMARY
- HANDLE, SECONDARY
- HINGE

 OPERATION DIAGRAM  
NOT TO SCALE

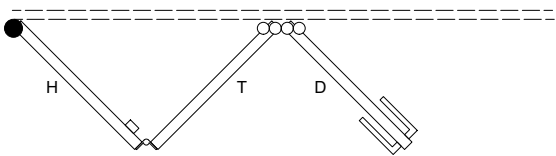



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916341


Uni-directional - Right - 3R

USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

  3R

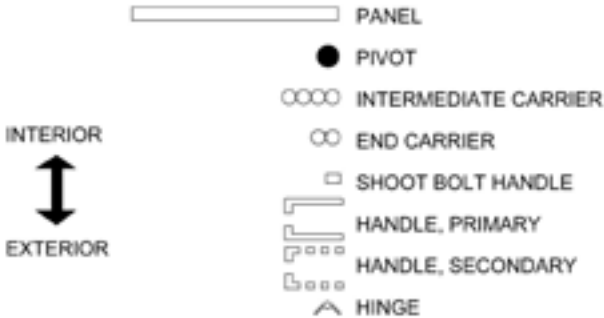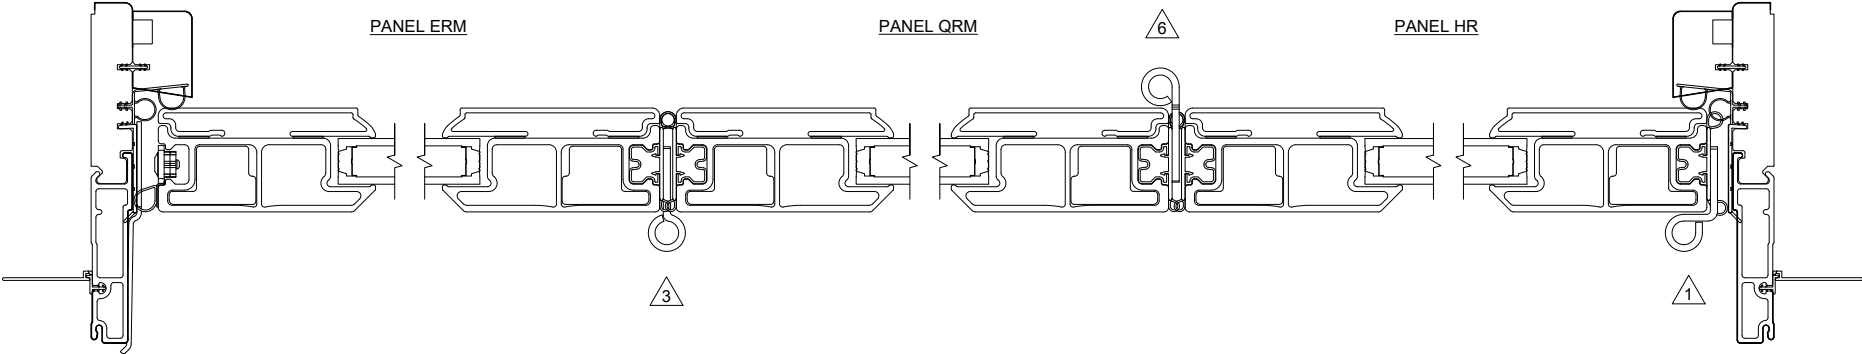

OPERATION DIAGRAM  
NOT TO SCALE

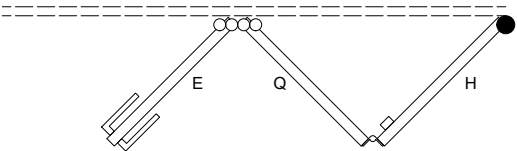 

| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |



19916348




# Uni-directional - Left - 4L

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 4L

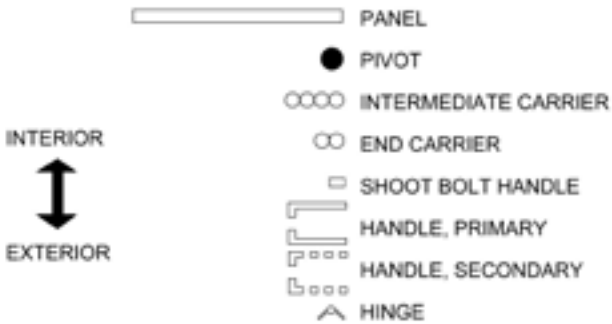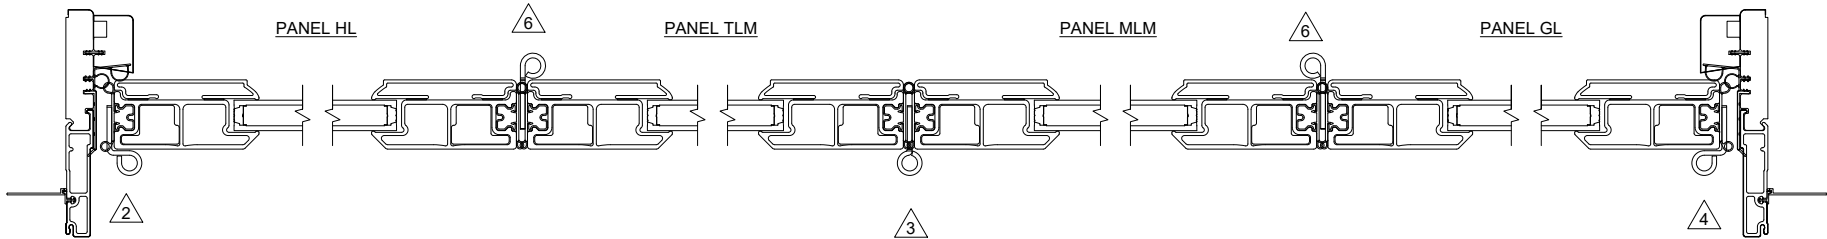

OPERATION DIAGRAM  
NOT TO SCALE

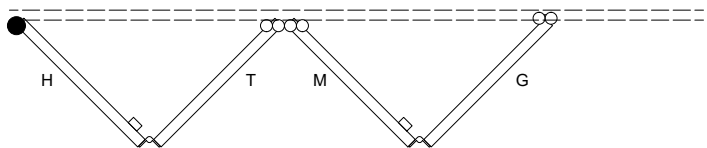 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916342


# Uni-directional - Right - 4R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 4R

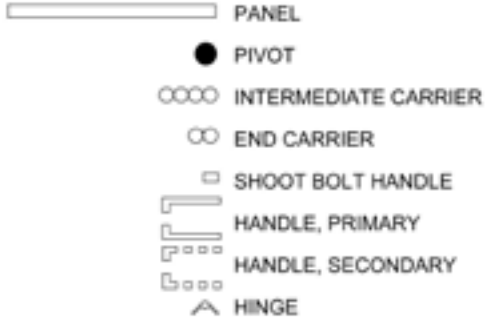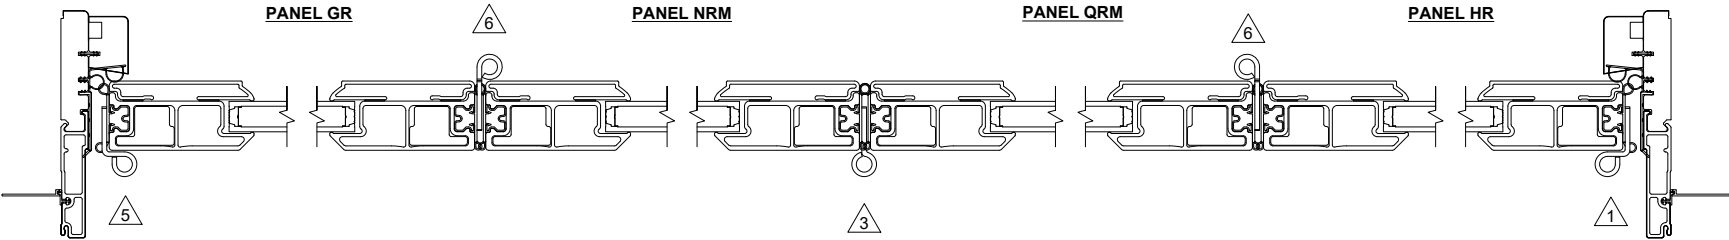

OPERATION DIAGRAM  
NOT TO SCALE


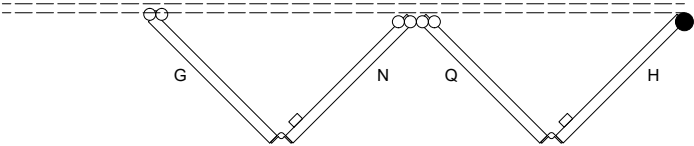 


| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |


# Uni-directional - Left - 5L

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 5L

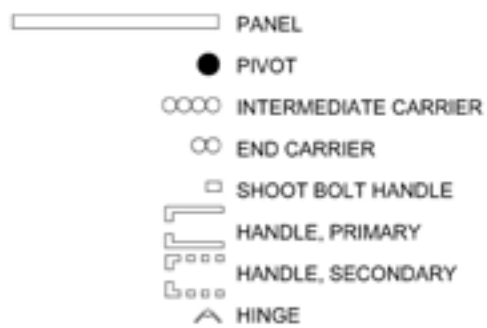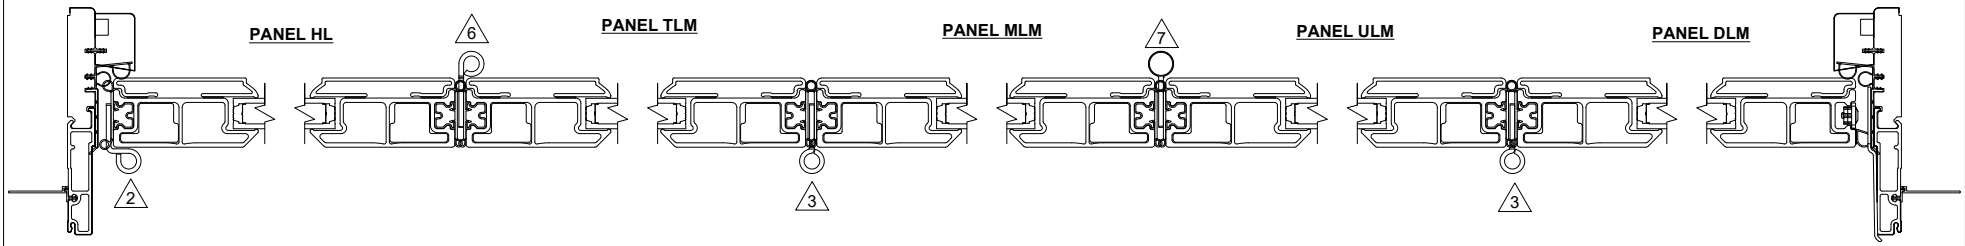

OPERATION DIAGRAM  
NOT TO SCALE

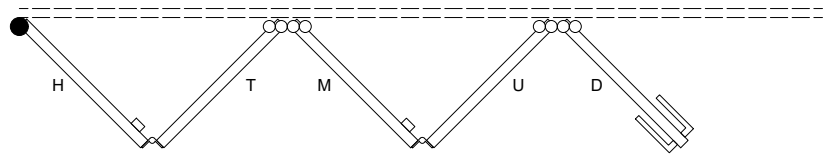 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916343


# Uni-directional - Right - 5R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 5R

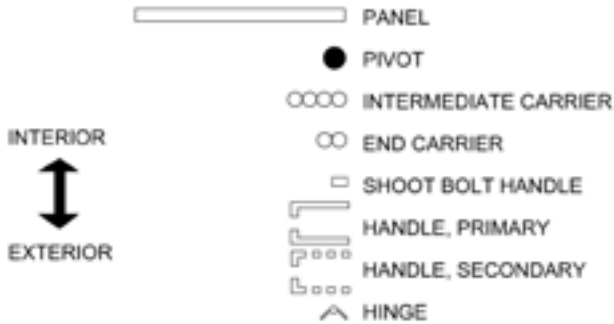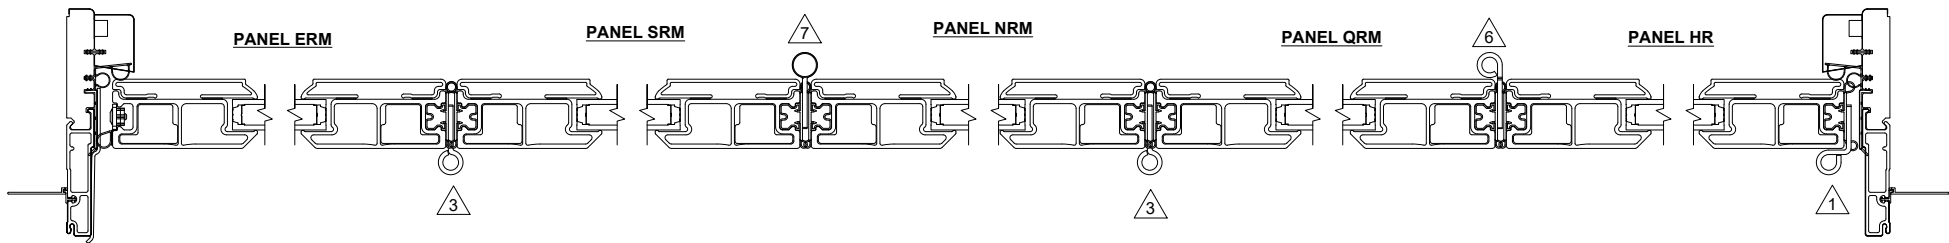

OPERATION DIAGRAM  
NOT TO SCALE

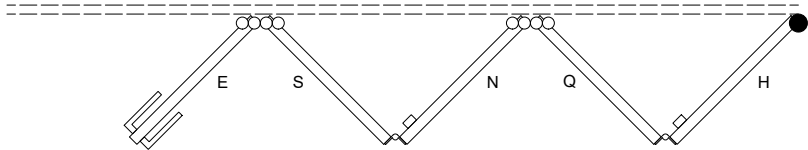 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916350

# Uni-directional - Left - 6L

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 6L


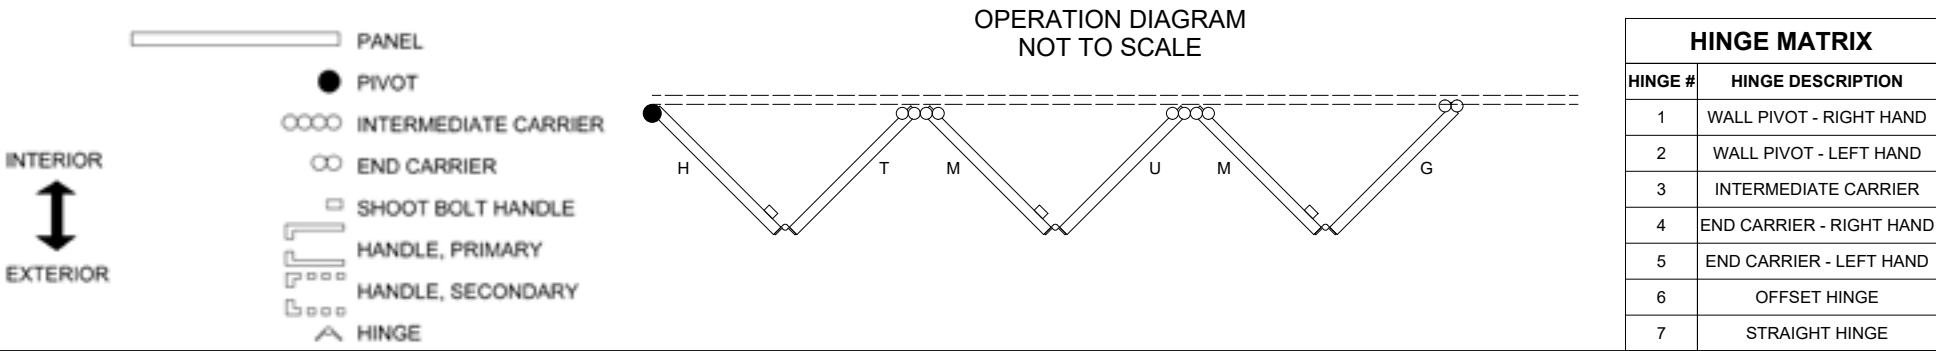
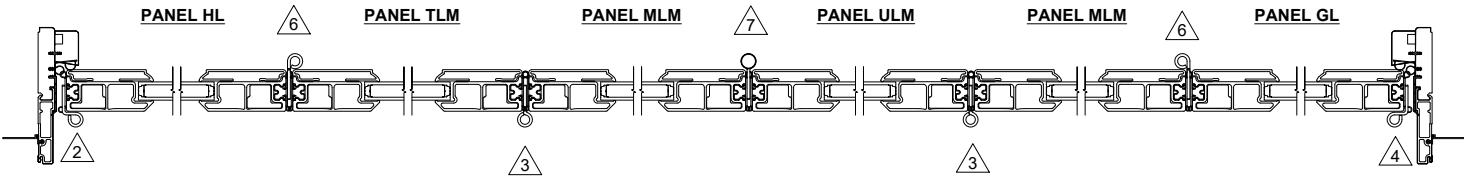


19916344

Uni-directional - Right - 6R

USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

   6R

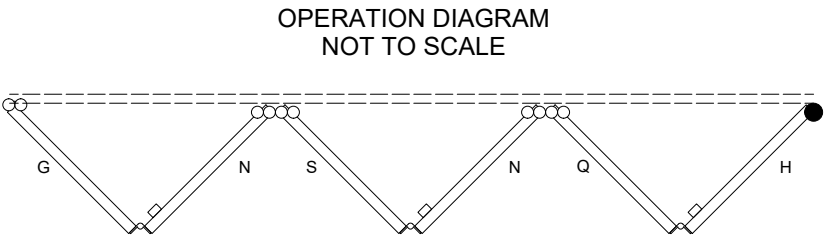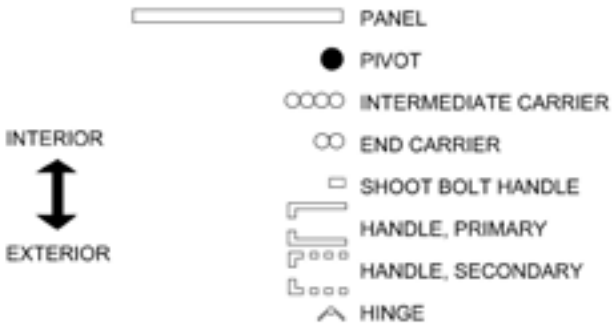
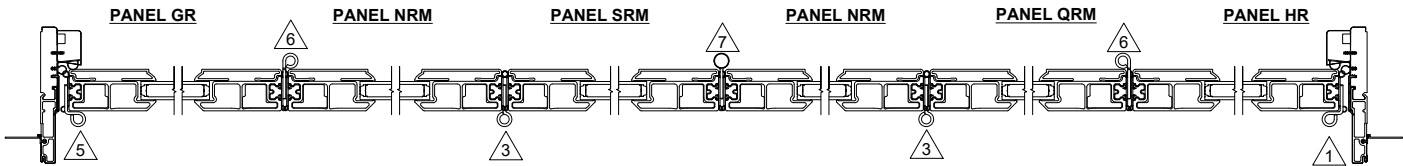


| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |


# Uni-directional - Left - 7L

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 7L

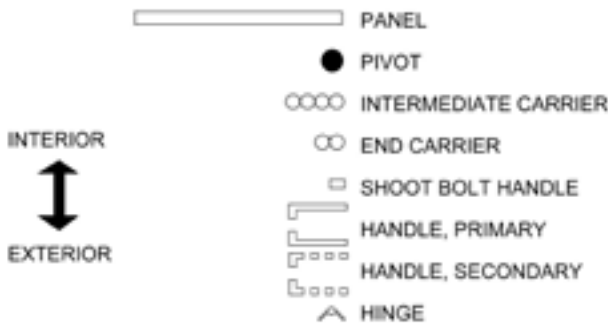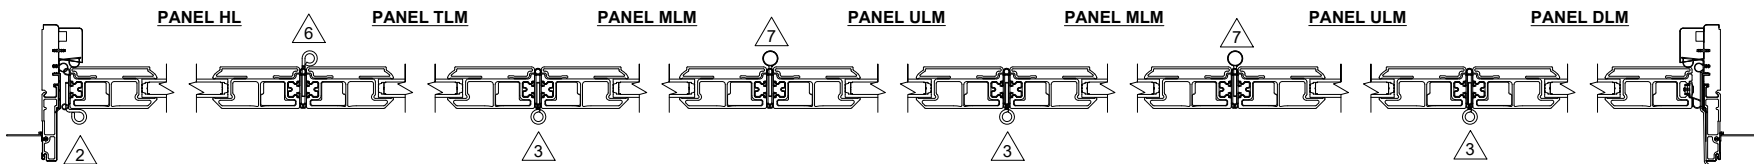

OPERATION DIAGRAM  
NOT TO SCALE

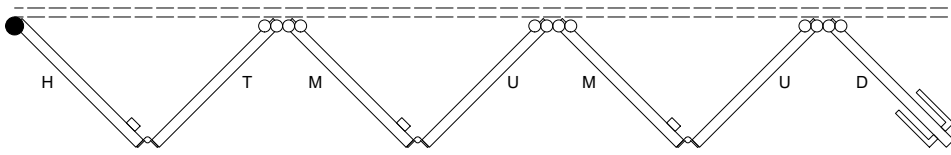 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916345


# Uni-directional - Right - 7R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 7R

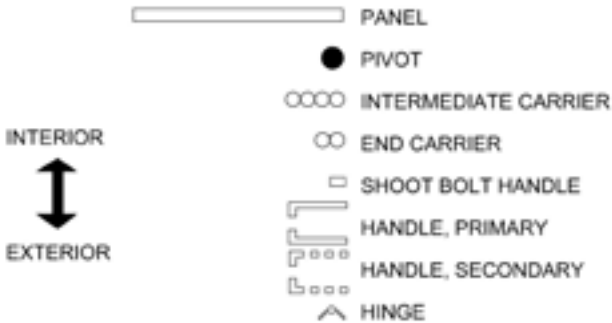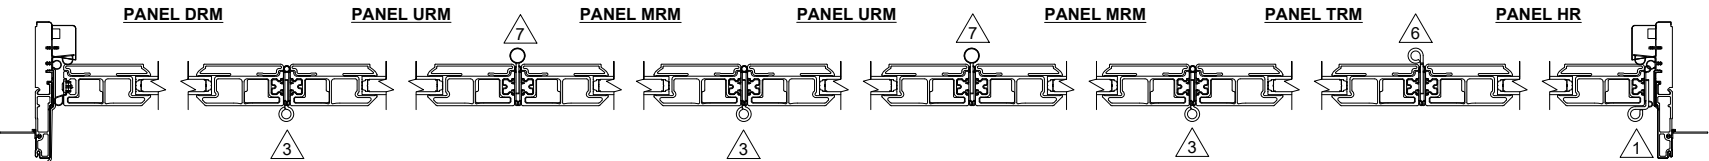

OPERATION DIAGRAM  
NOT TO SCALE

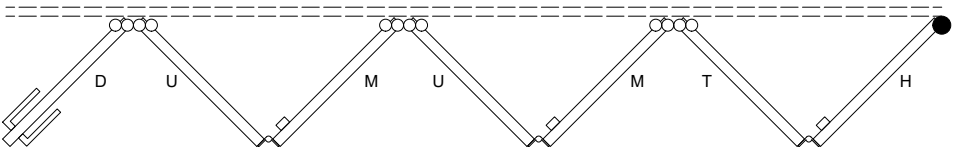 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |




# Uni-directional (equal) - Operating Panel - 1L1R (LH)

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 1L1R (LH)

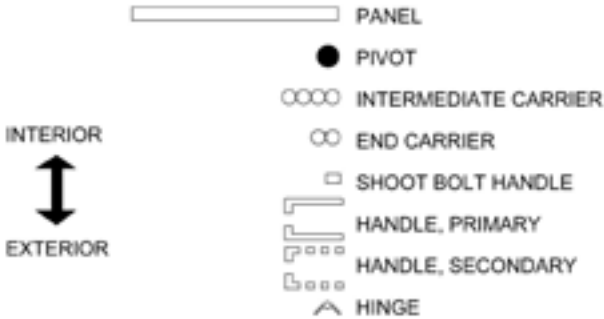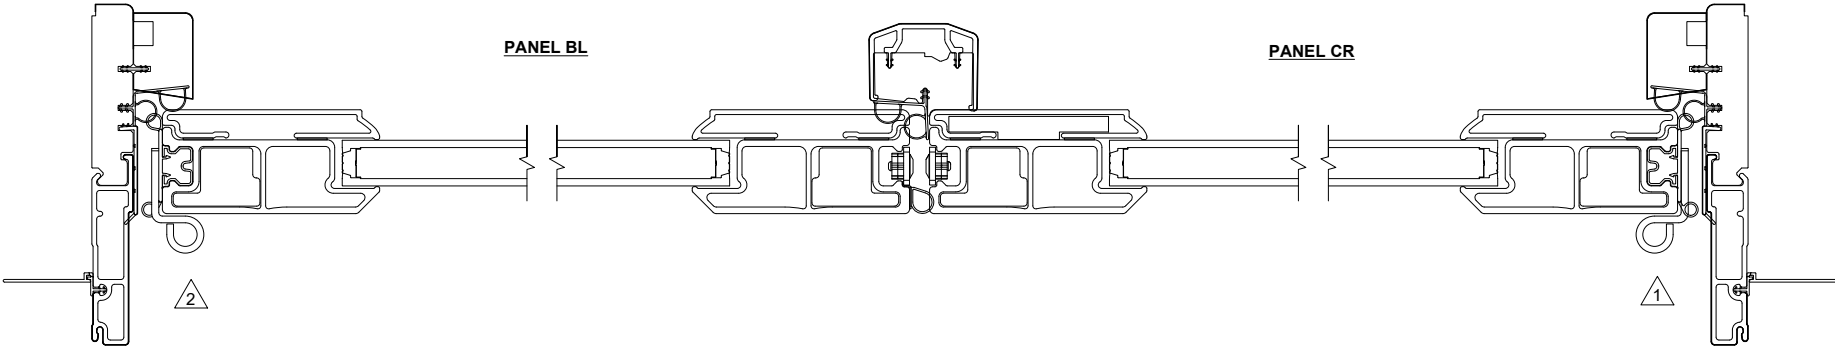

OPERATION DIAGRAM  
NOT TO SCALE

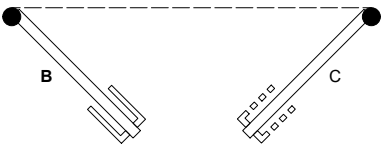 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916363


# Uni-directional (equal) - Operating Panel - 1L1R (RH)

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 1L1R (RH)

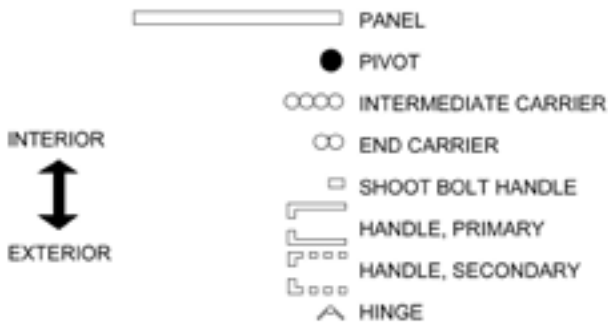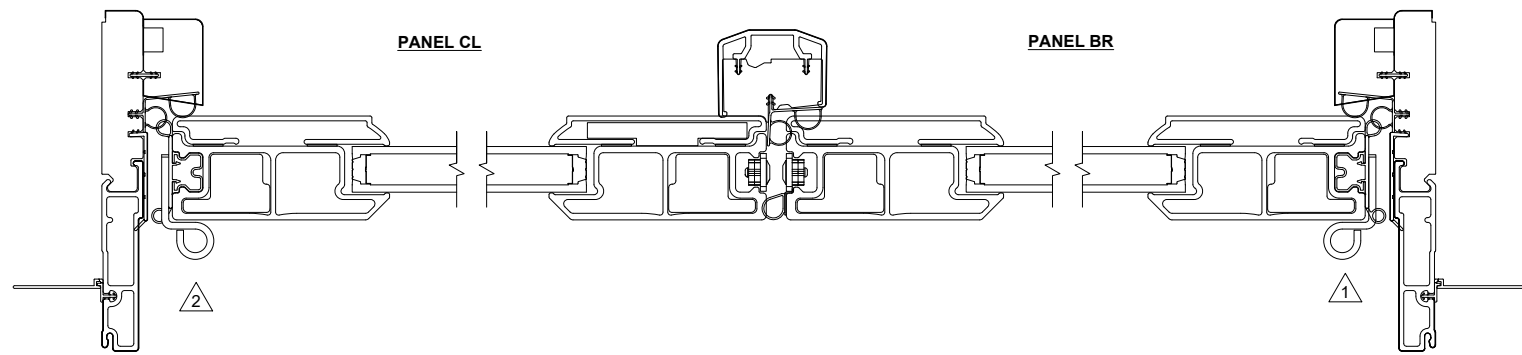

OPERATION DIAGRAM  
NOT TO SCALE

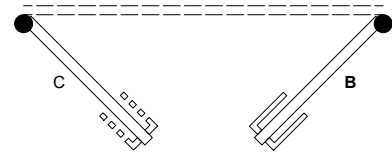 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916364


# Bi-parting (equal) - 2L2R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 2L2R

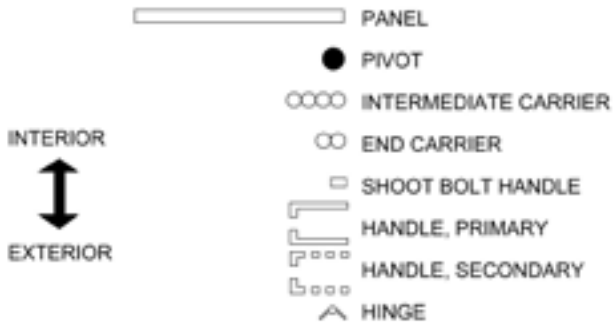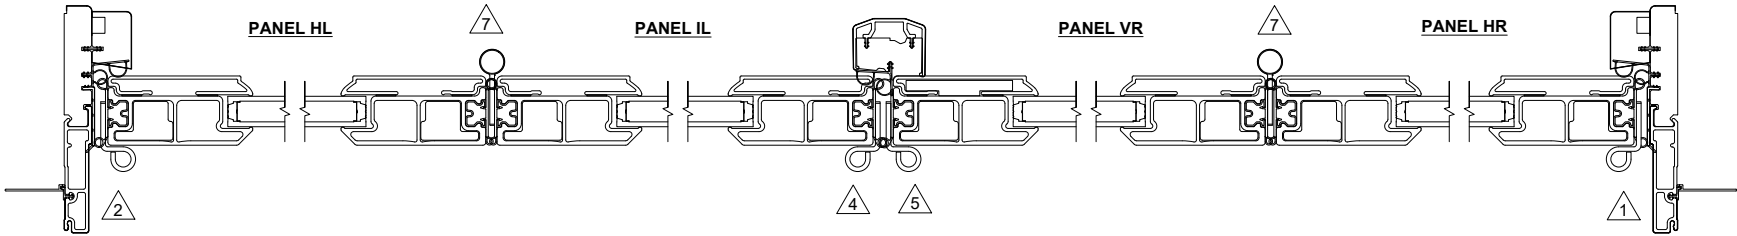

OPERATION DIAGRAM  
NOT TO SCALE

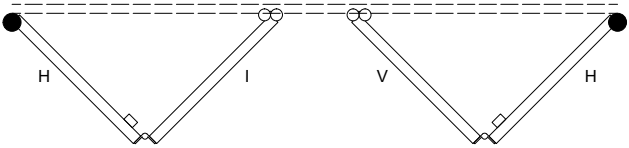 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916365

Bi-parting (equal) - 3L3R (LH)

USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

  3L3R (LH)

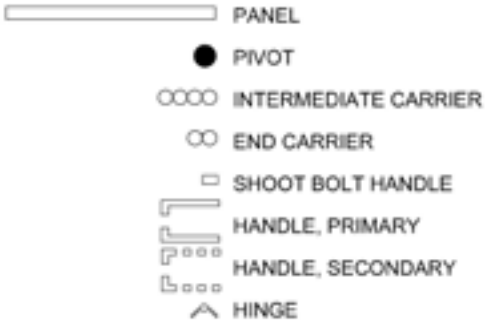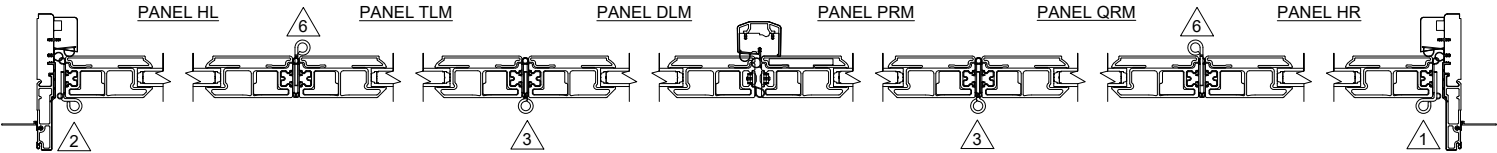

OPERATION DIAGRAM  
NOT TO SCALE





| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |


# Bi-parting (equal) - 3L3R (RH)

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 3L3R (RH)

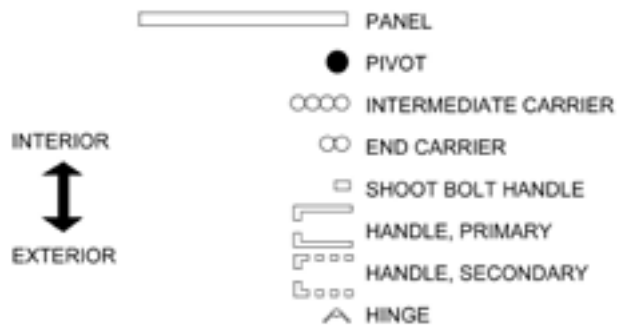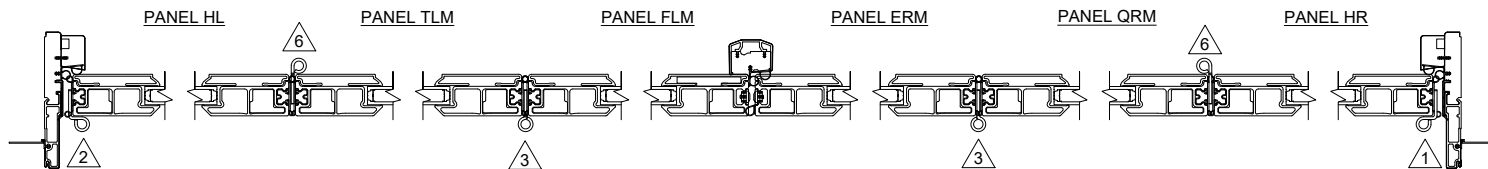

OPERATION DIAGRAM  
NOT TO SCALE

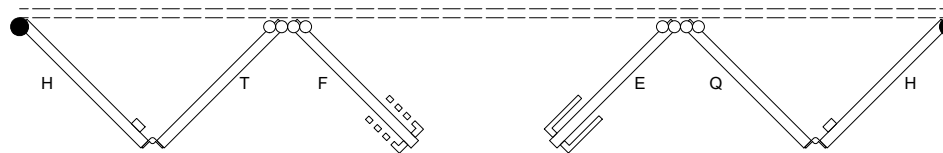 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916367


# Uni-directional (unequal) - Operating Panel - 1L2R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 1L2R

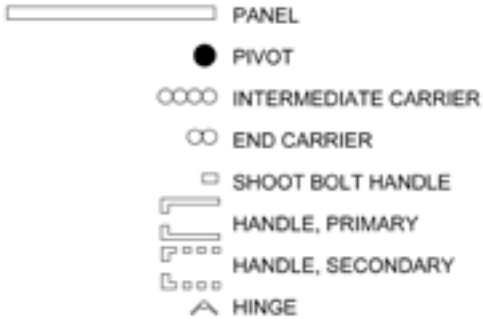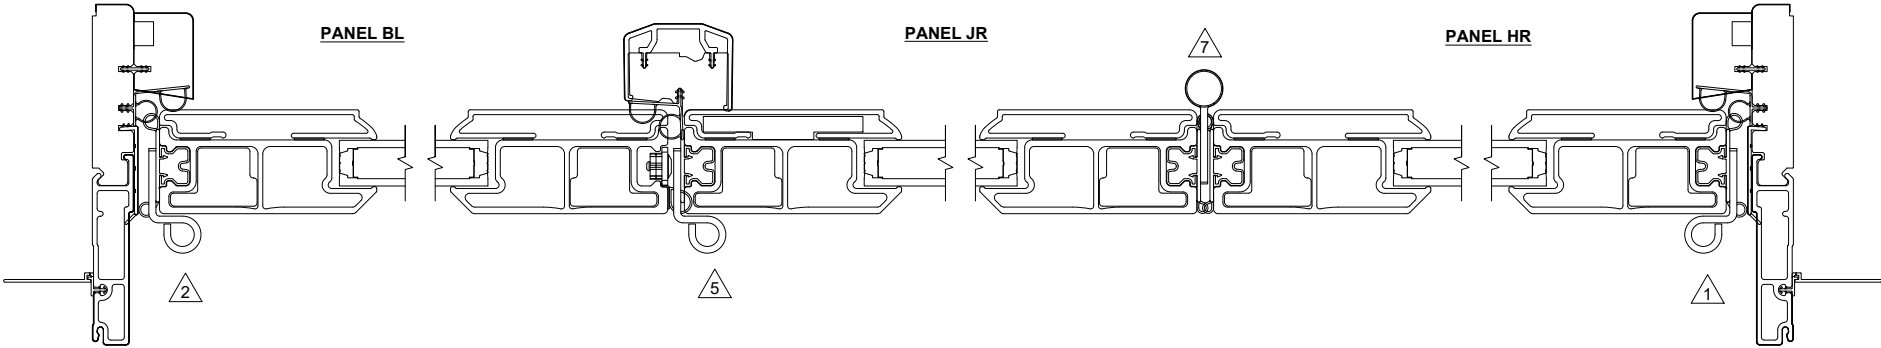

OPERATION DIAGRAM  
NOT TO SCALE

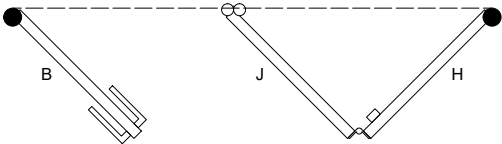 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916358


# Uni-directional (unequal) - Operating Panel - 2L1R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 2L1R

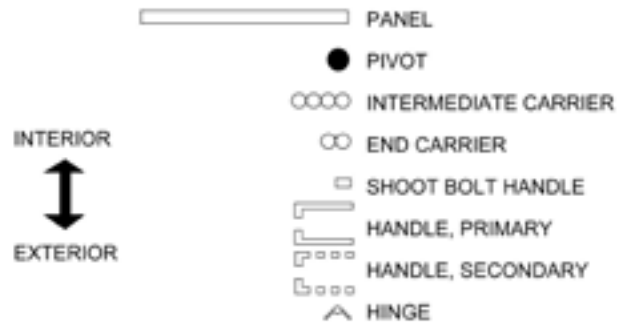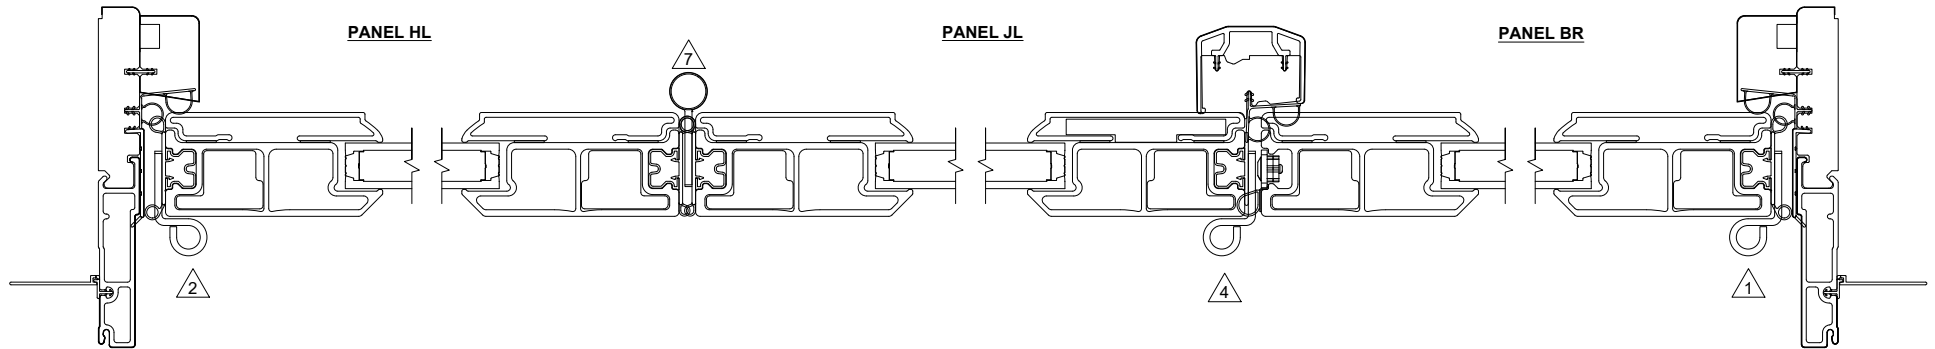

OPERATION DIAGRAM  
NOT TO SCALE

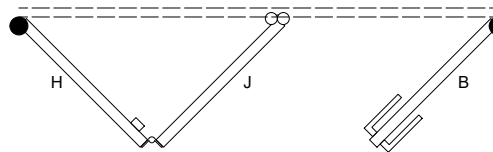 




| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916353

# Uni-directional (unequal) - Operating Panel - 3L1R

   USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 3L1R

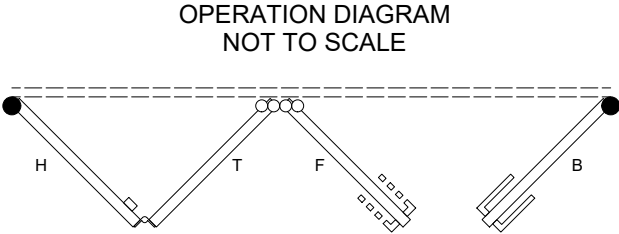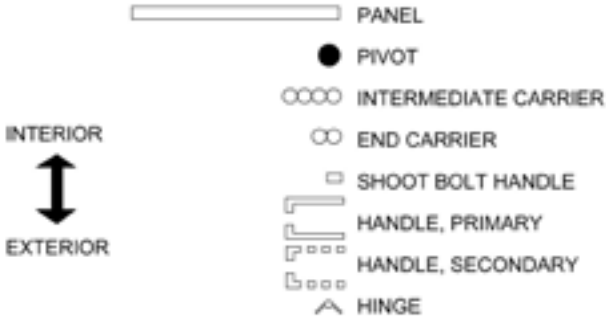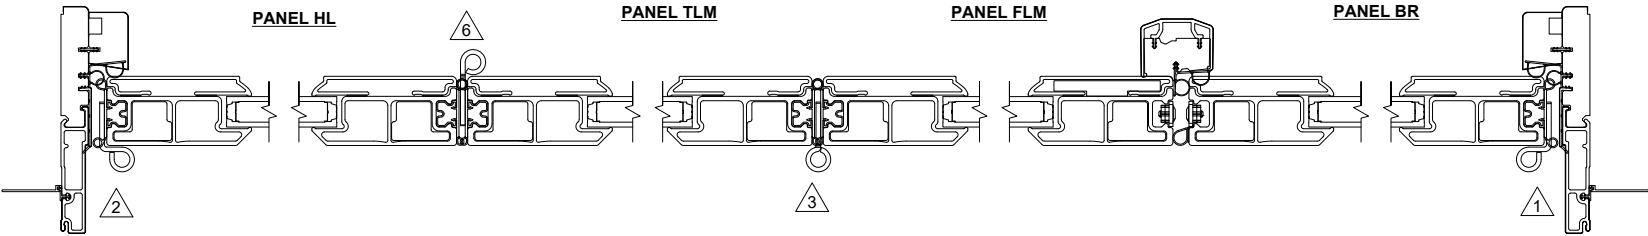

| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |



19916354




# Uni-directional (unequal) - Operating Panel - 1L3R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 1L3R

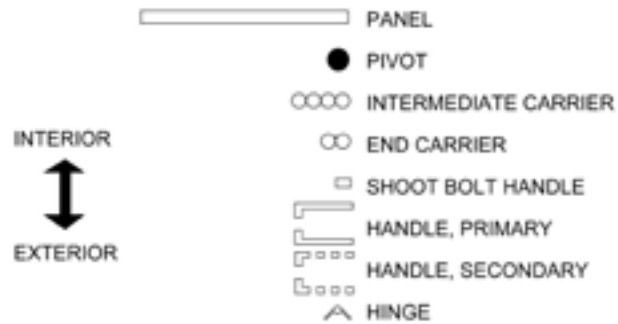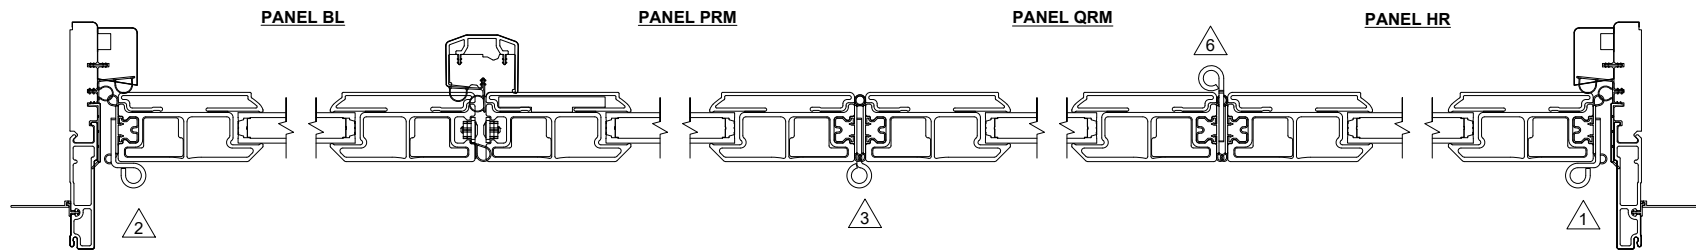

OPERATION DIAGRAM  
NOT TO SCALE

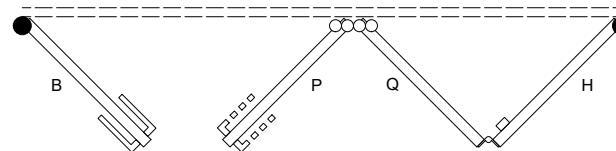 


| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916359

# Bi-parting (unequal) - Operating Panel - 4L1R

 USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 4L1R


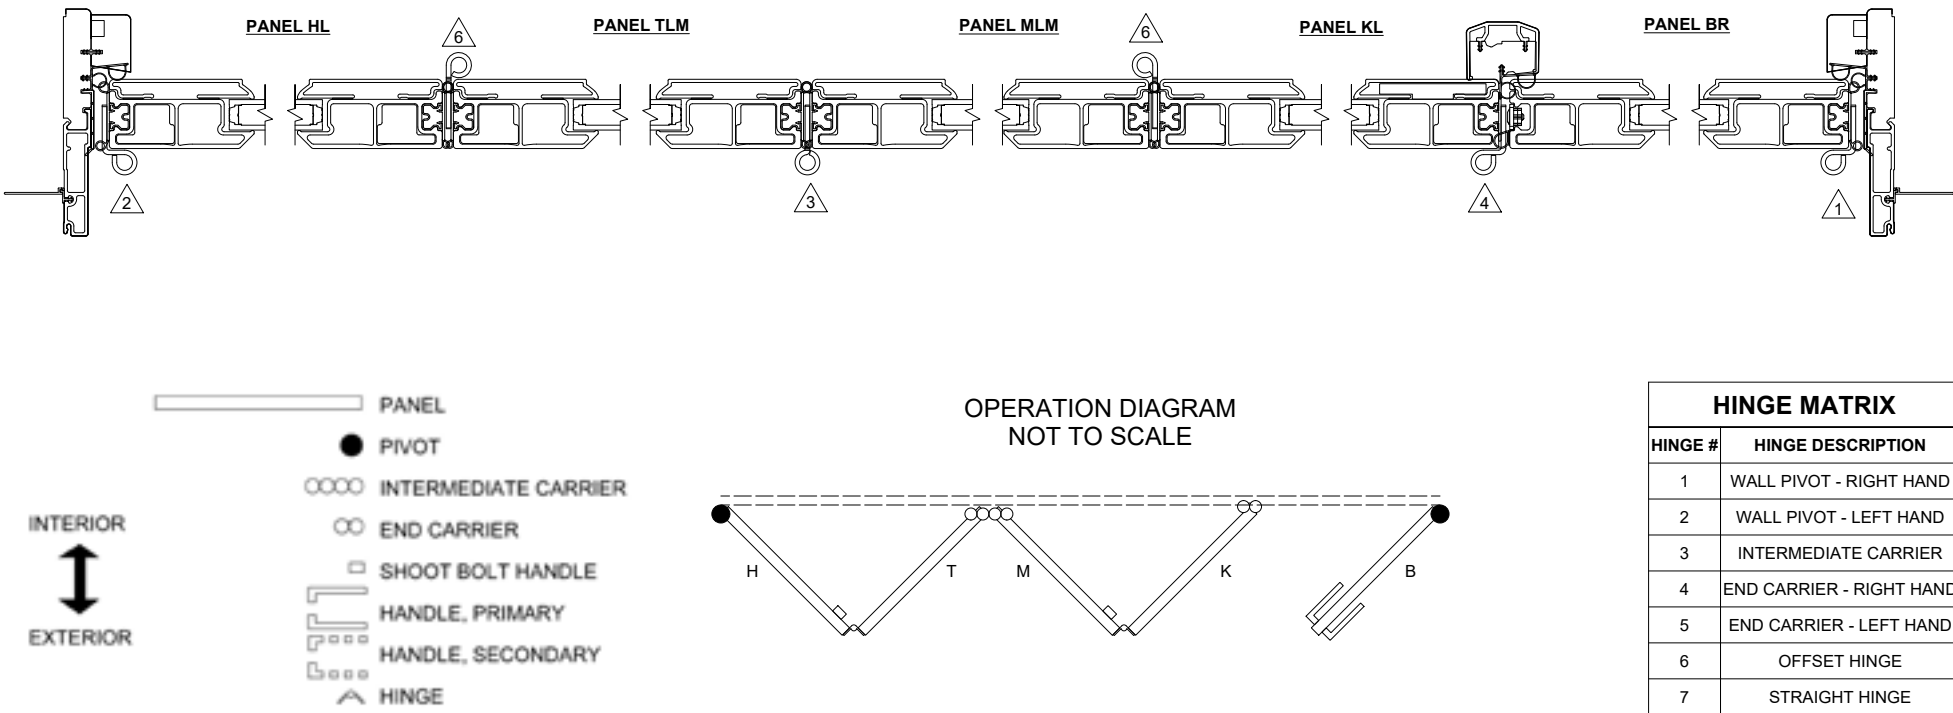


19916355


# Bi-parting (unequal) - Operating Panel - 1L4R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 1L4R

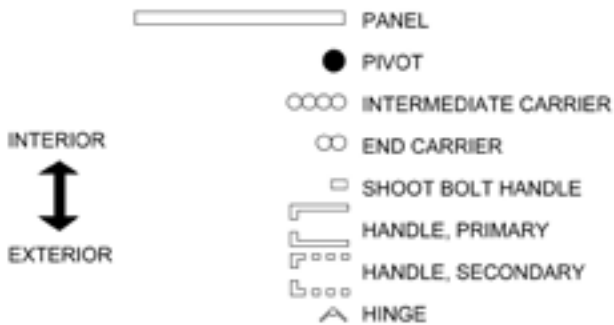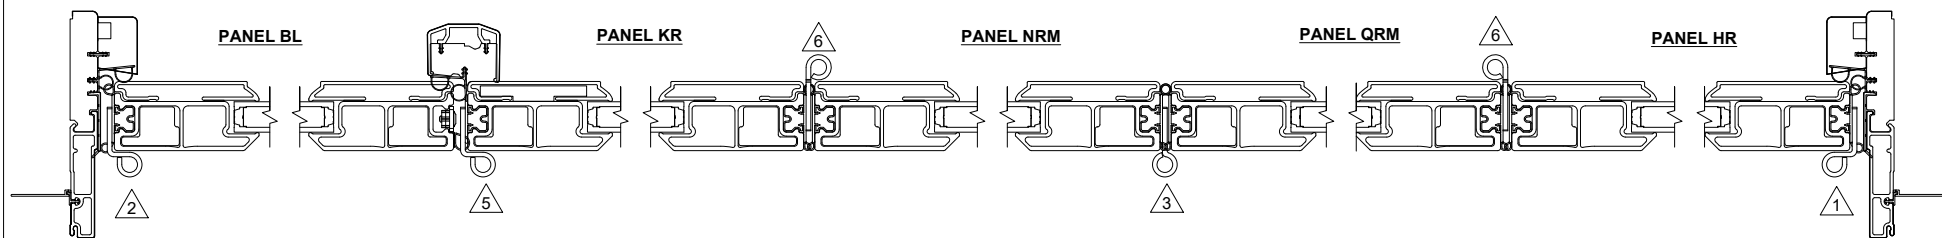

OPERATION DIAGRAM  
NOT TO SCALE

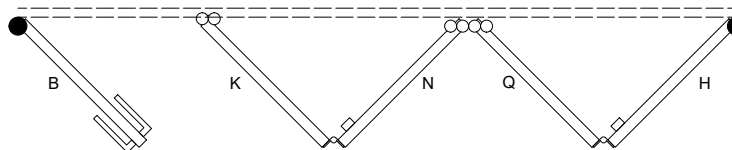 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916360


# Bi-parting (unequal) - Operating Panel - 5L1R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 5L1R

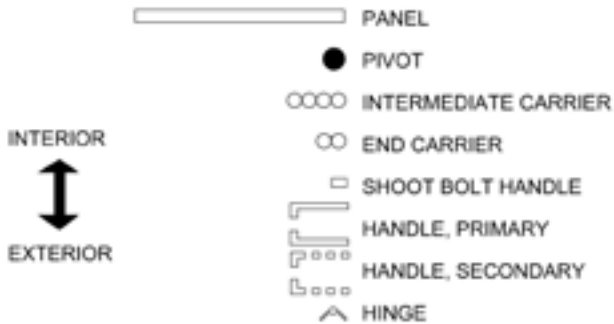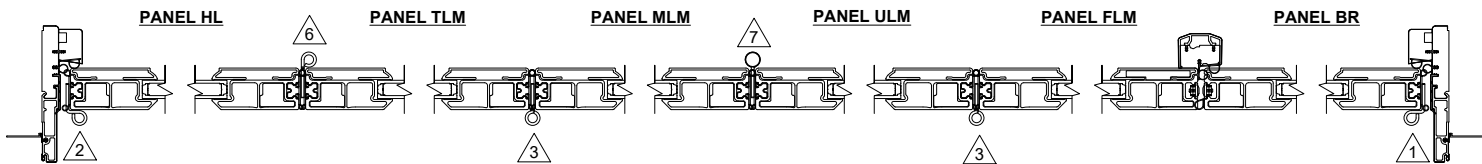

OPERATION DIAGRAM  
NOT TO SCALE

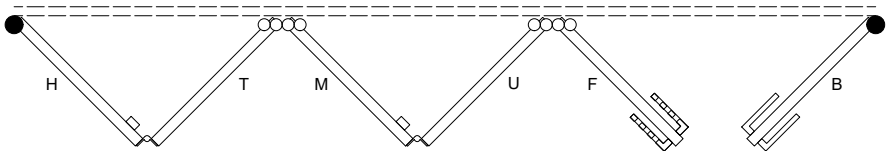 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916356


# Bi-parting (unequal) - Operating Panel - 1L5R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 1L5R

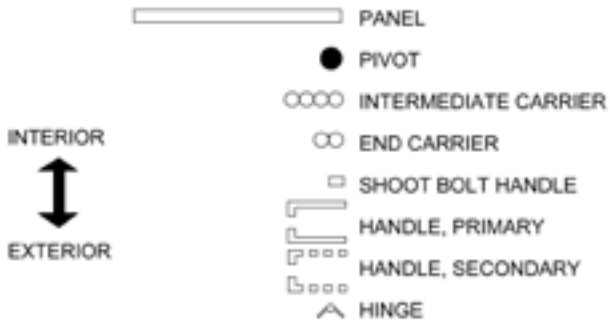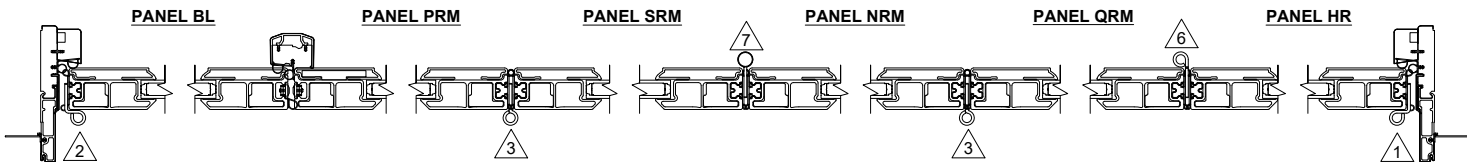

OPERATION DIAGRAM  
NOT TO SCALE

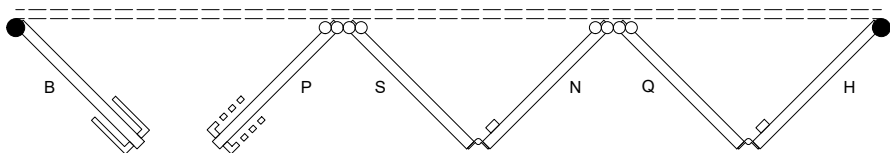 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916361


# Bi-parting (unequal) - Operating Panel - 6L1R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 6L1R

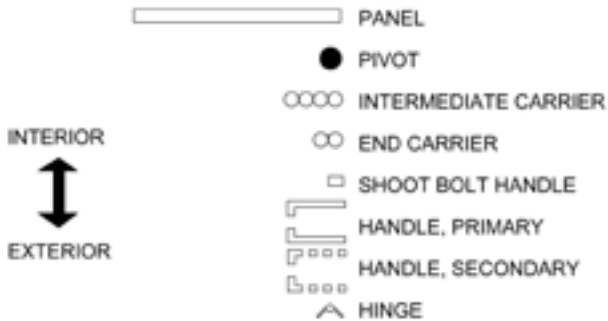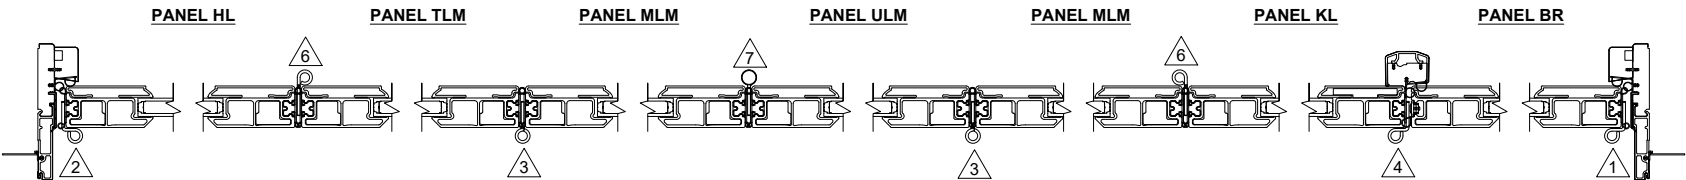

OPERATION DIAGRAM  
NOT TO SCALE

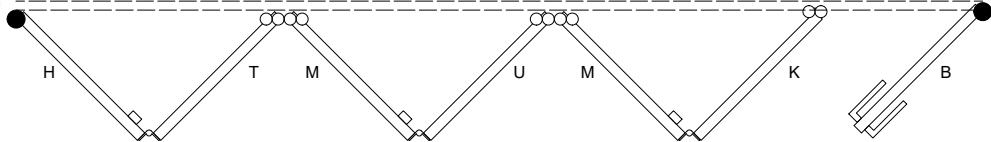 



| HINGE MATRIX |                          |
|--------------|--------------------------|
| HINGE #      | HINGE DESCRIPTION        |
| 1            | WALL PIVOT - RIGHT HAND  |
| 2            | WALL PIVOT - LEFT HAND   |
| 3            | INTERMEDIATE CARRIER     |
| 4            | END CARRIER - RIGHT HAND |
| 5            | END CARRIER - LEFT HAND  |
| 6            | OFFSET HINGE             |
| 7            | STRAIGHT HINGE           |

19916357

# Bi-parting (unequal) - Operating Panel - 1L6R

  USE THIS DIAGRAM IN CONJUNCTION WITH THE PROVIDED INSTALLATION INSTRUCTIONS TO DETERMINE HINGE AND PANEL LOCATIONS

## 1L6R

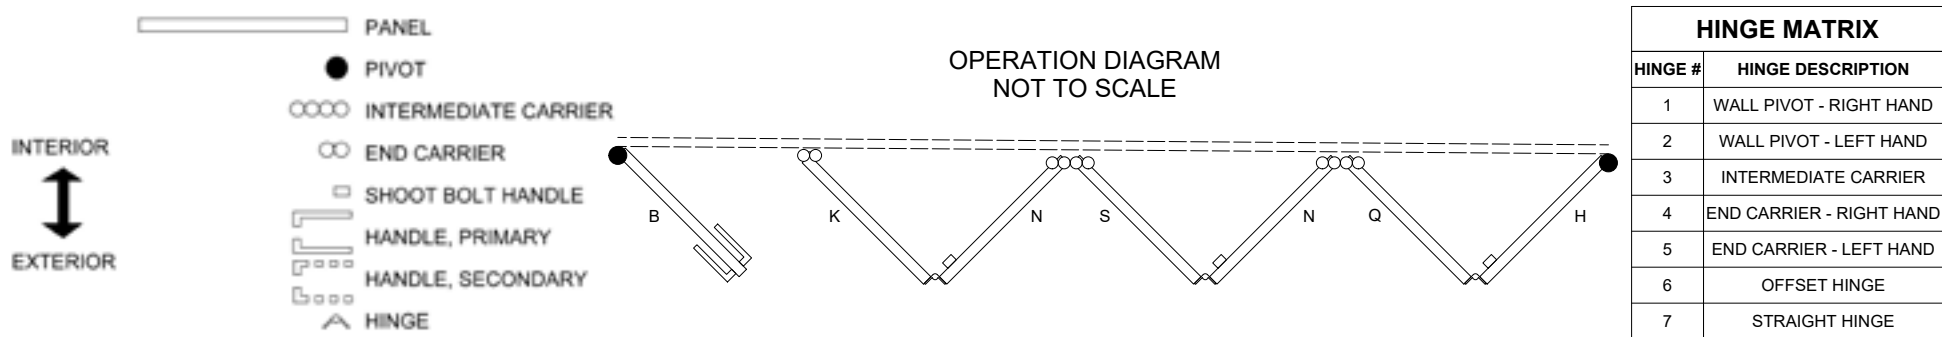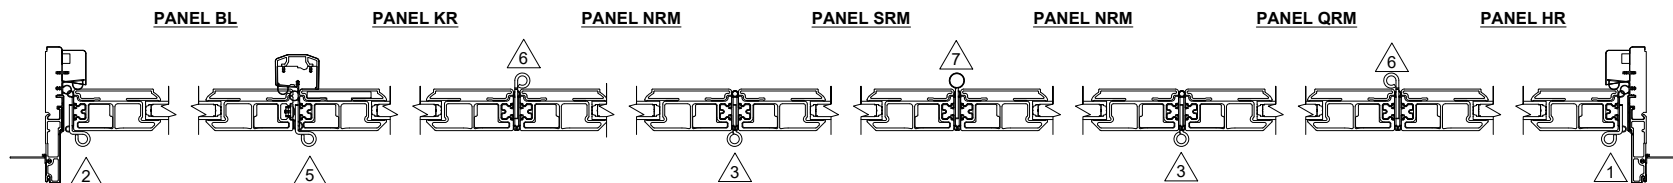

19916362