## Clad Ultimate Glider Secondary Handle Installation Instruction



## **Before You Begin**

The Marvin Clad Ultimate Glider XX configuration secondary sash features an optional sash pull handle that must be field applied. The sash pull can be installed at a convenient location of your choice along the jamb side stile.

## You Will Need to Supply

Phillips screwdriver

Awl

Drill with a 7/64" bit

NOTE: Numbers listed in parentheses ( ) are metric equivalents in millimeters rounded to the nearest whole number.

- 1. Open the primary sash 1" (25) and then slide the secondary sash over 12" (305).
- 2. Fold the template at the dotted line and place the template at a convenient location along the stile. Mark the location of the screws, 7/8" (22) from the edge of the stile, with an awl. Pre-drill the holes with a 7/64" bit. See figure 1. Use a Phillips screwdriver and supplied screws to secure the handle to the sash

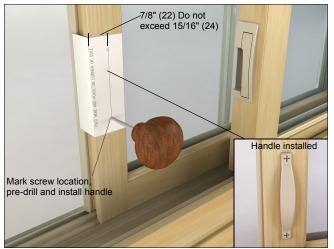


Figure 1

1

NOTE: Do not install secondary handle in alignment with operating sash latch.

Fold Here and Place on Exterior Edge of Stile

Screw holes are exactly 3" (76) apart.