Marvin Interior Shade Ultimate Casement and Direct Glaze Finishing Instruction



ABSTRACT: The following instruction is for finishing a Marvin Interior Shade on an Ultimate Casement or Direct Glaze window. Shades are for use only in connection with Marvin® brand windows and doors. Shades are not covered under warranty if used with Integrity®, Infinity®, or any third party manufacturer's product.



WARNING

Always practice safety! Wear the appropriate eye, ear and hand protection, especially when working with power tools.

You Will Need to	Supply
------------------	--------

Small pliers Clamps Phillips screwdriver

Prepping for Finishing

 Compress the shade stack to the lower portion. Remove interior shade surround from unit by retracting the top plunger(s) and rotate surround out of unit. Remove the pull bar and optional stack bar if necessary. See figure 1.



Figure 1

2. Remove the screws on back side of pull bar to remove pull bar from fabric adapter. Remove optional stack cover if necessary. See figure 2.



Figure 2

3. Remove vinyl cover at sill and header. See figure 3.



Figure 3

4. Locate springs on header of interior shade system and unhook one end of each chain. See figure 4.



Figure 4

5. Feed cords through the corner key of the surround. See figure 5.

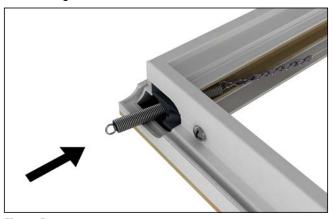


Figure 5

6. Tilt the compressed fabric stack and pull bars out of the surround. See figure 6.

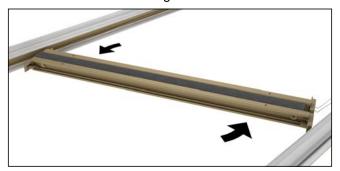


Figure 6

7. Remove crimp end from corner key. See figure 7.

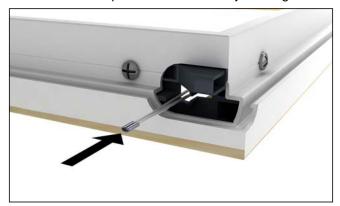


Figure 7

8. Interior shade is now ready to finish. Finish interior shade as desired. Do not reassemble until all components are completely dried.

Reassemble

1. Attach pull bar and optional stack cover to the fabric adapter with screws. See figure 8.



Figure 8

2. Insert crimped end of cords into corner key holes and slide into slot. See figure 9.

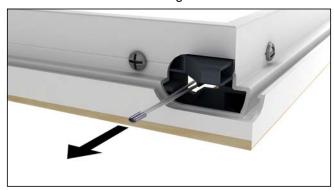


Figure 9

NOTE: End cap should not pinch cords, ensure that the cords are not tangled.

3. Install vinyl sill cover and header cover. Pull chain and spring ends of cord tight through the pull bar. See figure 10.

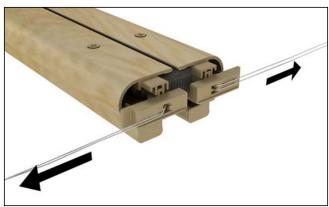


Figure 10

4. Insert one end of pull bar stack into the surround and rotate the other end into place. See figure 11.

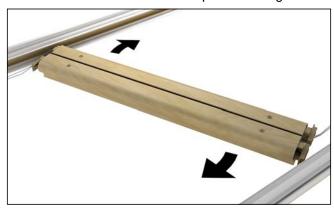


Figure 11

5. Move pull bars to the sill end. Lightly clamp pull bar stack down to sill end. See figure 12.



Figure 12

Loop cord through end cut of the rail. Feed spring end of the cord through the upper corner keys. See figure 13.

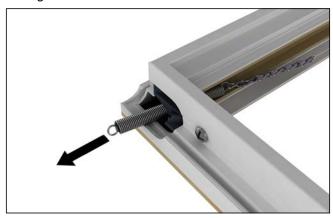


Figure 13

7. Attach chain to spring. See figure 14.



Figure 14

8. Reinstall interior shade following the <u>installation</u> <u>instruction</u>.