
## Installation Bracket Instructions




## YOU WILL NEED TO SUPPLY

Safety glasses Hearing protection Phillips screwdriver Hammer

Attach installation brackets on all sides of frame with #7 x 5/8" screws at 4" (102) to 6" (152) from corner. Minimum of two per side. All others evenly spaced at 16" (406) - 18" (457) apart. Minimum of two per side. See illustration 1. Attach bracket so that no less than three holes extend past the interior of the frame.

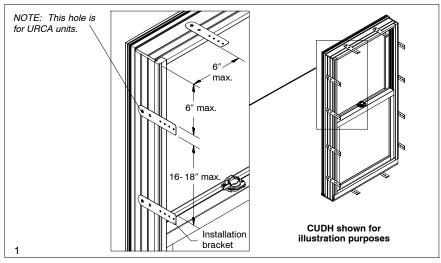

2. With a maximum of 1/2" (13) Rough Opening gap at point of attachment bend installation brackets around the framing studs. Attach with #8 x 1 1/2" screw. See illustration 2.

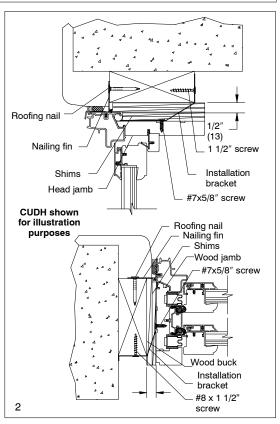

NOTE: Numbers listed in parentheses () are metric equivalents in millimeters rounded to the nearest whole number. **ATTENTION: Specifications and technical data are subject to change without notice.** 

11708224 2015-05-29


## **Installation Bracket Instructions**




## YOU WILL NEED TO SUPPLY

Safety glasses Hearing protection Phillips screwdriver Hammer

Attach installation brackets on all sides of frame with #7 x 5/8" screws at 4" (102) to 6" (152) from corner. Minimum of two per side. All others evenly spaced at 16" (406) - 18" (457) apart. Minimum of two per side. See illustration 1. Attach bracket so that no less than three holes extend past the interior of the frame.

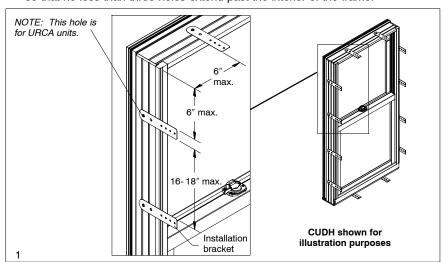

2. With a maximum of 1/2" (13) Rough Opening gap at point of attachment bend installation brackets around the framing studs. Attach with #8 x 1 1/2" screw. See illustration 2.

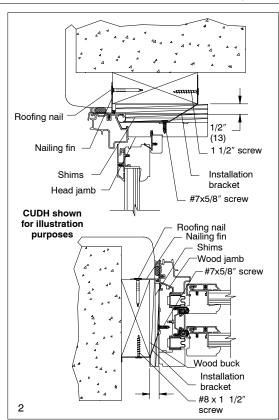

NOTE: Numbers listed in parentheses () are metric equivalents in millimeters rounded to the nearest whole number. **ATTENTION:** Specifications and technical data are subject to change without notice.