

## MARVIN® Essential J-Channel Installation Instructions

### Parts Shipped

- 4 – Cut to length J-Channel
- 4 – Corner keys

1. Install both side jamb J-Channels first, taking care not to seat the corners into the kerf. See figure 1.
2. Insert the corner keys, flat side towards the interior, into the head jamb and sill J-Channels.
3. Slide the head jamb and sill J-Channels onto the jamb J-Channels and press into place. See figure 2.

*NOTE: Mulled units will require using a hack saw to notch out the accessory kerf at the mull joint.*

19970093  
07/29/2019



Figure 1: Pressing on the J-Channel



Figure 2: Inserting corner key

## MARVIN® Essential J-Channel Installation Instructions

### Parts Shipped

- 4 – Cut to length J-Channel
- 4 – Corner keys

1. Install both side jamb J-Channels first, taking care not to seat the corners into the kerf. See figure 1.
2. Insert the corner keys, flat side towards the interior, into the head jamb and sill J-Channels.
3. Slide the head jamb and sill J-Channels onto the jamb J-Channels and press into place. See figure 2.

*NOTE: Muller units will require using a hack saw to notch out the accessory kerf at the mull joint.*

19970093  
07/29/2019



Figure 1: Pressing on the J-Channel

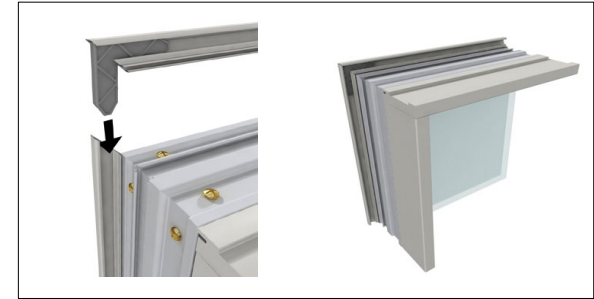


Figure 2: Inserting corner key

## MARVIN® Essential J-Channel Installation Instructions

### Parts Shipped

- 4 – Cut to length J-Channel
- 4 – Corner keys

1. Install both side jamb J-Channels first, taking care not to seat the corners into the kerf. See figure 1.
2. Insert the corner keys, flat side towards the interior, into the head jamb and sill J-Channels.
3. Slide the head jamb and sill J-Channels onto the jamb J-Channels and press into place. See figure 2.

*NOTE: Muller units will require using a hack saw to notch out the accessory kerf at the mull joint.*

19970093  
07/29/2019



Figure 1: Pressing on the J-Channel



Figure 2: Inserting corner key

## MARVIN® Essential J-Channel Installation Instructions

### Parts Shipped

- 4 – Cut to length J-Channel
- 4 – Corner keys

1. Install both side jamb J-Channels first, taking care not to seat the corners into the kerf. See figure 1.
2. Insert the corner keys, flat side towards the interior, into the head jamb and sill J-Channels.
3. Slide the head jamb and sill J-Channels onto the jamb J-Channels and press into place. See figure 2.

*NOTE: Muller units will require using a hack saw to notch out the accessory kerf at the mull joint.*

19970093  
07/29/2019



Figure 1: Pressing on the J-Channel



Figure 2: Inserting corner key