

Elevate Installation Clips Supplemental Installation Instruction



Before You Begin

These instructions are intended as a supplement to the enclosed installation instructions. Additional fastening is required for certain size Elevate Casement Picture (ELCAP) and Elevate Direct Glaze Picture (ELDGP) windows.

ELCAP Call Numbers: 4955, 4959, 4963, 4971, 5739, 5743, 5747, 5755, 5759, 5763, 5771, 7339, 7343, 7347, 7355, 7359.

ELDGP: See illustration for recommended installation.






Impact Products

For impact rated products, attach clips on the jambs and head jamb (must also be on the sill of Round Top) 6" (152) from each corner and 12" (305) on center.

You Will Need to Supply

1 1/4" screws Phillips head bit
1/8" drill bit with power drill/drive



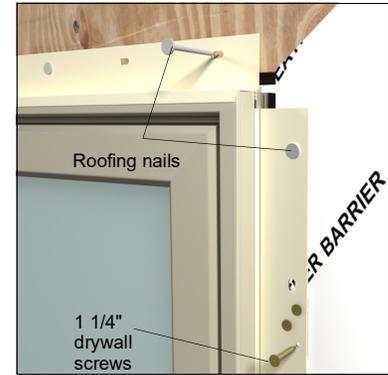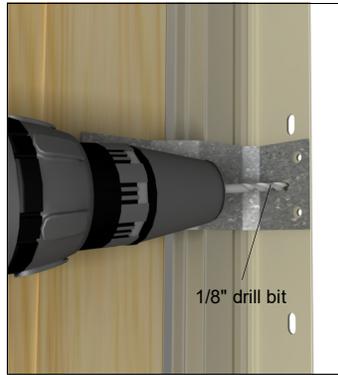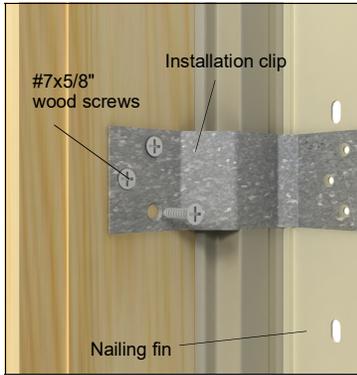

1. Install clips at the recommended locations as shown at the beginning of this instruction. Place the short end of the bracket on the back side of the nailing fin. Attach the clips to the wood jamb liner with the three #7x 5/8" screws provided.
2. Prior to installing the unit in the rough opening, use the holes in the back side of the clip and drill through the nailing fin with a 1/8" drill bit. This will give the location of the screw holes for fastening to the rough opening.
3. Install the unit following the enclosed installation instructions. Fasten the clips to the rough opening with 1 1/4" drywall screws through the three holes in the nailing fin and bracket that you pre-drilled earlier.