

# Essential Glider Screen Retrofit (IFGL) Field Applied Instruction



**ABSTRACT:** These instructions are intended for retrofitting a screen in the field on an Essential Glider.

**NOTE:** Numbers listed in parentheses ( ) are metric equivalents in millimeters rounded to the nearest whole number.




## CAUTION

To avoid injury or death, do not lean out of window when performing retrofit.

### You will need to supply

Safety glasses      3/16" drill bit/drill

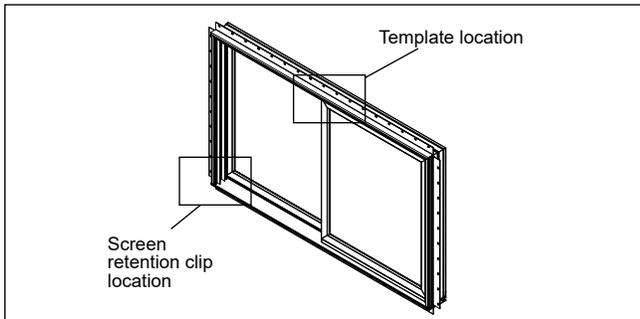

## Installing Screen

1. Remove old screen.
2. Remove "S" shape screen retention clip on lower outside corner. See figure 1.

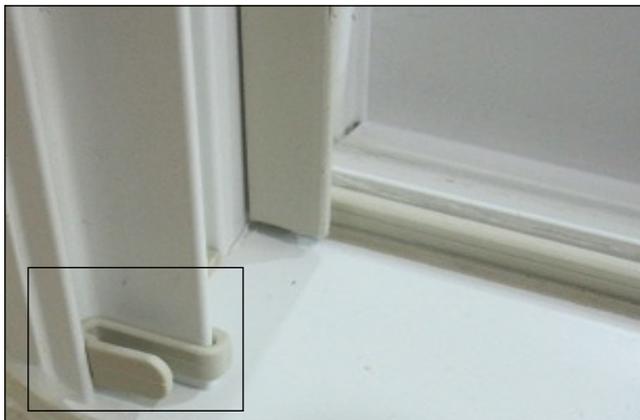


Figure 1

3. Place masking tape over stationary sash to prevent damage to sash. See figure 2.



Figure 2

4. Cut, fold and place template on frame. Secure with tape. Drill line should be 7/32" (6) from sash frame. See figure 3 and figure 4. (Template is on page 2.)

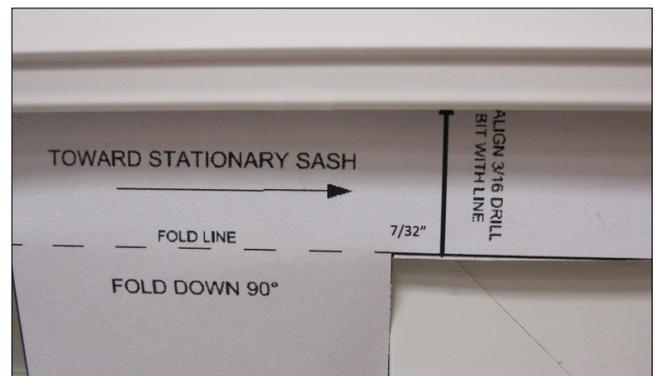


Figure 3



## CAUTION

Drill through first frame wall only; do **not** drill through entire frame.

5. Using a drill with 3/16" (5) drill bit, carefully align drill bit with drill line on template and drill hole in groove of frame. See figure 4.



Figure 4

6. Install clip in frame. Indent on clip faces toward the exterior. Check that clip is secure. See figure 5.



Figure 5

7. Remove masking tape. Install new screen ensuring that screen corners are secure and both plungers are fully engaged.

## Template

