Clad Ultimate Double Hung Sash Lift

Accessory Installation Instructions

MARVIN Windows and Doors
Made for you.®
www.marvin.com

STANDARD PARTS SHIPPED

Sash Lift
2 – #8 x 1″ slotted ovalhead wood screws

YOU WILL NEED TO SUPPLY

Pencil and tape
Awl or marker point
Drill and 3/32″ drill bit
Straight blade screwdriver

NOTE: Numbers listed in parentheses ( ) are metric equivalents in millimeters rounded to the nearest whole number.

ATTENTION: Specifications and technical data are subject to change without notice.

11708569
2/25/99
Truth #92194

INSTALLATION PROCEDURES

1. Determine desired center(s) of sash lift across bottom rail. Mark location near top of flat face with tape and pencil.
2. Cut out template and position on bottom rail, aligning along top edge of rail face. Mark screw with an awl or pencil.
3. Drill pilot holes at screw locations with a 3/32″ drill bit 3/4 – 1″ (22 - 25) deep.
4. Position handle on rail, attach with screws using a straight blade screwdriver. Remove tape and pencil marks used to locate template.

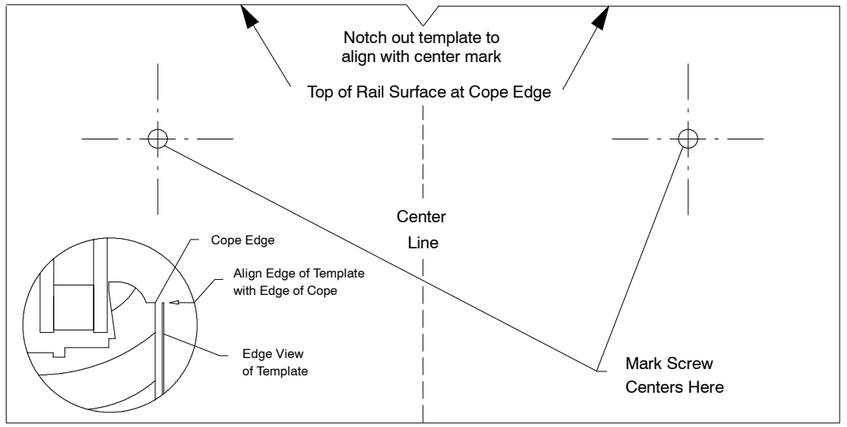

Clad Ultimate Double Hung Sash Lift

Accessory Installation Instructions

MARVIN Windows and Doors
Made for you.®
www.marvin.com

STANDARD PARTS SHIPPED

Sash Lift
2 – #8 x 1″ slotted ovalhead wood screws

YOU WILL NEED TO SUPPLY

Pencil and tape
Awl or marker point
Drill and 3/32″ drill bit
Straight blade screwdriver

NOTE: Numbers listed in parentheses ( ) are metric equivalents in millimeters rounded to the nearest whole number.

ATTENTION: Specifications and technical data are subject to change without notice.

11708569
2/25/99
Truth #92194

INSTALLATION PROCEDURES

1. Determine desired center(s) of sash lift across bottom rail. Mark location near top of flat face with tape and pencil.
2. Cut out template and position on bottom rail, aligning along top edge of rail face. Mark screw with an awl or pencil.
3. Drill pilot holes at screw locations with a 3/32″ drill bit 3/4 – 1″ (22 - 25) deep.
4. Position handle on rail, attach with screws using a straight blade screwdriver. Remove tape and pencil marks used to locate template.

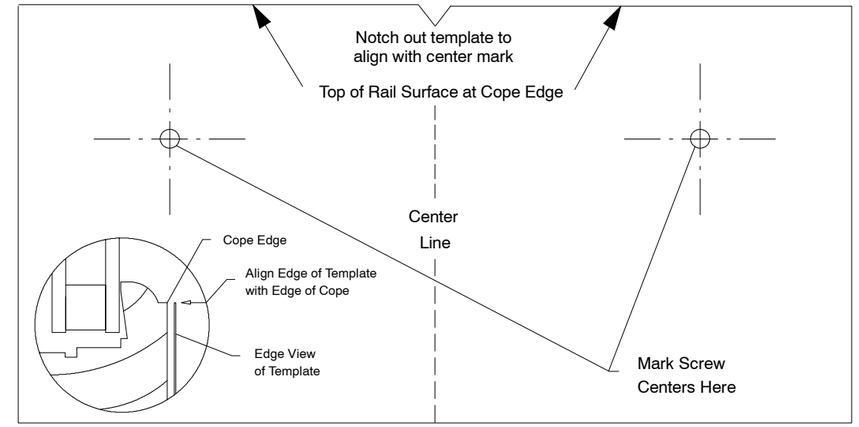

Clad Ultimate Double Hung Sash Lift

Accessory Installation Instructions

MARVIN Windows and Doors
Made for you.®
www.marvin.com

STANDARD PARTS SHIPPED

Sash Lift
2 – #8 x 1″ slotted ovalhead wood screws

YOU WILL NEED TO SUPPLY

Pencil and tape
Awl or marker point
Drill and 3/32″ drill bit
Straight blade screwdriver

NOTE: Numbers listed in parentheses ( ) are metric equivalents in millimeters rounded to the nearest whole number.

ATTENTION: Specifications and technical data are subject to change without notice.

11708569
2/25/99
Truth #92194

INSTALLATION PROCEDURES

1. Determine desired center(s) of sash lift across bottom rail. Mark location near top of flat face with tape and pencil.
2. Cut out template and position on bottom rail, aligning along top edge of rail face. Mark screw with an awl or pencil.
3. Drill pilot holes at screw locations with a 3/32″ drill bit 3/4 – 1″ (22 - 25) deep.
4. Position handle on rail, attach with screws using a straight blade screwdriver. Remove tape and pencil marks used to locate template.

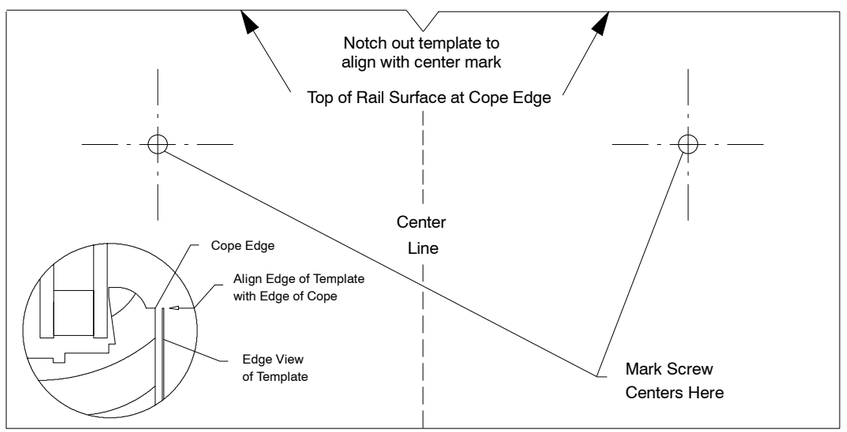

Clad Ultimate Double Hung Sash Lift

Accessory Installation Instructions

MARVIN Windows and Doors
Made for you.®
www.marvin.com

STANDARD PARTS SHIPPED

Sash Lift
2 – #8 x 1″ slotted ovalhead wood screws

YOU WILL NEED TO SUPPLY

Pencil and tape
Awl or marker point
Drill and 3/32″ drill bit
Straight blade screwdriver

NOTE: Numbers listed in parentheses ( ) are metric equivalents in millimeters rounded to the nearest whole number.

ATTENTION: Specifications and technical data are subject to change without notice.

11708569
2/25/99
Truth #92194

INSTALLATION PROCEDURES
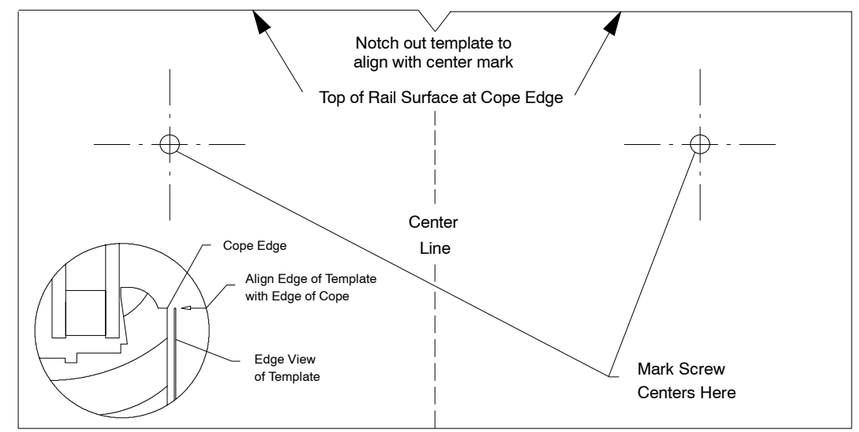
1. Determine desired center(s) of sash lift across bottom rail. Mark location near top of flat face with tape and pencil.
2. Cut out template and position on bottom rail, aligning along top edge of rail face. Mark screw with an awl or pencil.
3. Drill pilot holes at screw locations with a 3/32″ drill bit 3/4 – 1″ (22 - 25) deep.
4. Position handle on rail, attach with screws using a straight blade screwdriver. Remove tape and pencil marks used to locate template.